

PEUGEOT MOTORCYCLES



PEUGEOT
MOTORCYCLES

PEUGEOT METROPOLIS

Livret de bienvenue
& d'entretien

Welcome
& maintenance booklet



Bienvenue

FR

Welcome

GB

Herzlich willkommen

DE

Benvenuto

IT

Bienvenidos

ES

Welkom

NL

Καλώς ήρθατε

GR

Välkommen

SE

Bem-vindo

PT

Hoş geldiniz

TR

Vítejte

CZ

TABLE OF CONTENTS

Memorandum.....	1
Pre-delivery inspection.....	1
Information.....	2
Diagnostic and Personal data.....	2
Manufacturer's warranty.....	3
Duration of the warranty.....	3
Scope of the manufacturer's warranty.....	3
Conditions of application of the commercial warranty.....	3
Geographical scope of application.....	4
Important.....	6
Products to use.....	6
Tyres.....	6
Maintenance advice.....	6
Cleaning the vehicle.....	6
Environment / Recyclable.....	7
Extended periods of immobilisation and storage.....	7
Quick-start guide.....	8
Starting and driving.....	8
Controls.....	10
Right controls ■.....	10
Left controls ■.....	10
Central controls ■.....	10
Instruments.....	11
Warning lights.....	11
Equipments.....	12
Pair a Bluetooth ® telephone.....	12
Resetting the tripmeter ■.....	12
Storage compartments.....	12
Adjustable windshield.....	12
Storage compartment / Accessory socket (USB)...	12
Rear storage compartment.....	13
Advice.....	13
Fuel supply.....	13

Checking the engine oil level.....	13
No SMART KEY recognition.....	14
Periodic servicing.....	15
Service schedule.....	16

GB

MEMORANDUM

Name:
.....
First name:
.....
Address:
.....
Post code:
.....
Town:
.....
Telephone number:
.....
Model:
.....
Colour:
.....
Engine no.:
.....
Affix the label with the repair code here smart key.



PRE-DELIVERY INSPECTION

VIN: VGA
The dealer must carry out the pre-delivery inspection and supply the preparation sheet for the delivered vehicle.

Inspection on delivery

Customer signature
I have inspected the appearance of the vehicle and signed the pre-delivery preparation sheet for my vehicle, I did not notice any anomaly. I have been informed that it is important to read the user manual and maintenance book.

Date:

Customer signature:

Dealer signature

I confirm that the vehicle identified above has undergone preparation and a pre-delivery inspection as specified by PEUGEOT MOTOCYCLES. I have supplied the customer with the user manual and maintenance book. I have explained how to operate the machine's controls and emphasised that it is important to consult the user manual and PEUGEOT MOTOCYCLES warranty conditions.

Date:

Dealer signature:



INFORMATION

You have just bought a Peugeot vehicle. We would like to thank you for purchasing one of our products. Your vehicle is built to last but this does not mean that it does not require a minimum amount of maintenance.

Your authorised dealer is familiar with all the vehicle's characteristics and has genuine spare parts and specific tools. He can advise you and service your vehicle in the best conditions according to the established service schedule to ensure that you can enjoy driving it in complete safety.

This manual must be considered as an integral part of the vehicle and must remain with it even if the vehicle is sold on.

It also describes a selection of your vehicle's most common functions.

However, we advise you to read the entire user manual, which is available in digital format at the following address:

<https://www.peugeot-motocycles.fr/documentation>

Scan this QR code for direct access:





 



In particular, you will find the safety instructions, warnings, important notes and comments in it.

PEUGEOT MOTOCYCLES is constantly improving its vehicles. It therefore reserves the right to remove, modify or add any reference mentioned

The only authentic documents are those available online at the above address.

The following symbols mean:

	You are advised to read the full version of the user manual.
	Operation that can be dangerous for people.
	Operation that can be hazardous to the vehicle.
	Gives key information concerning operation of the vehicle.
	An asterisk indicates equipment depending on the version.
	The product pollutes. Do not dispose of it in the environment.

DIAGNOSTIC AND PERSONAL DATA

When diagnostic tools are connected to your vehicle, they collect data. This data includes your vehicle's identification number (VIN).

For further information on your rights or the way PEUGEOT MOTOCYCLES processes data, please refer to our privacy policy at the following address:

<https://peugeot-motocycles.com/fr/mentions-legales/>

Or contact us at:

dpo@peugeotmotocycles.com

MANUFACTURER'S WARRANTY

(March 2022 edition)

The manufacturer of your vehicle, PEUGEOT MOTOCYCLES, which has its head office at rue du 17 novembre - 25350 Mandeuve (France), hereinafter PEUGEOT MOTOCYCLES, offers you a commercial warranty on your new combustion engine or electric vehicle against any material or construction defects.

These manufacturer warranty terms are also available on the website.

<https://www.peugeot-motocycles.fr/documentation>

Duration of the warranty

Unless specific contrary provisions have been brought to your attention (warranty extension, fleet agreement, etc.), PEUGEOT MOTOCYCLES grants your vehicle a manufacturer's warranty for a period of:

- 24 months for private use, unlimited mileage;
- 24 months for professional use, limited to 20 000 km (<50cc, cat. L1e & L2e) or 30 000 km (>50cc, cat. L3e & L5e).



The term 'trader' is defined as "any public or private natural or legal person acting for purposes relating to their trading, business, craft, professional or agricultural activity, even when they act in the name or on behalf of another trader".

This warranty starts from the first time the vehicle is registered and applies to your vehicle with the exception of:

- The electric vehicle traction battery for which the current warranty is 24 months or 20 000 km, whichever is reached first, subject to the maintenance charges having been done regularly in accordance with the instructions in the PEUGEOT MOTOCYCLES maintenance manual;
- The electric vehicle traction battery for which the stated nominal capacity has declined by less than or equal to 25%, measured by a PEUGEOT MOTOCYCLES network technician during the warranty period. Due to the inherent chemistry of the battery, a decline in battery capacity (and therefore the vehicle's autonomy) may be observed over time, as the vehicle is used and according to the storage conditions;
- The combustion engine vehicle battery for which this warranty is six months subject to a minimum mileage of 200 km per month;
- The stand and the saddle, for which the warranty period is six months.

Scope of the manufacturer's warranty

With the exception of the restrictions stated below, this contractual warranty covers the repair or replacement of parts found to be faulty by PEUGEOT MOTOCYCLES or its representative and any ensuing labour costs.

It should be noted that:

- The repair or replacement of parts under this manufacturer's warranty does not extend the duration thereof. The warranty covering replacement parts fitted to your vehicle expires on the same date as your vehicle warranty;
- The faulty parts replaced under the warranty will be kept and become the property of PEUGEOT MOTOCYCLES.

Conditions of application of the commercial warranty

For optimal cover for work to be carried out on your vehicle under this commercial warranty, PEUGEOT MOTOCYCLES recommends that you exclusively entrust said work to a workshop within the authorised network.

If your vehicle is sold on, its successive owners shall benefit from the warranty until its date of expiry on condition that the application conditions of the warranty have been satisfied by each of them. For this purpose, you undertake to transmit the warranty application terms to the buyer of your vehicle, along with evidence of maintenance operations performed.

GB

The warranty applies on condition that:

- The first "warranty" service has been carried out and the vehicle has been regularly serviced in line with the instructions of the PEUGEOT MOTOCYCLES maintenance manual, and you can provide proof of this (service monitoring sheet, invoices, etc.). A tolerance of 100 km (or 1 month for the annual maintenance) is permitted in relation to the mileage specified in the maintenance schedule;
- The enhanced maintenance schedule is applied for professional use and, where necessary, for private use;
- Original parts have not been replaced with other components that have not been approved by PEUGEOT MOTOCYCLES and/or the assembly of which does not comply with good practices or the recommendations of PEUGEOT MOTOCYCLES (including, but not limited to, exhaust pipe, cylinder, piston, spark plug and the intake silencer on combustion vehicles, fuses, traction battery modules and the traction battery charger on electric vehicles, etc.);
- The vehicle has not been modified, transformed or equipped with accessories that have not been approved by PEUGEOT MOTOCYCLES (including, but not limited to, additional charger for electric vehicles, alarms, radio, headlights, luggage carriers, boosters, etc.);
- The vehicle has not been used for sports competitions;

The warranty does not cover:

- Maintenance operations (such as, but not limited to: oil change, lubrication, adjustment, cleaning, tensioning, etc.) and servicing listed in the PEUGEOT MOTOCYCLES service schedule and required for your vehicle to operate properly;
- The replacement of parts subject to normal wear linked to use of the vehicle, its mileage, its geographical and climatic environment and their non-reusable fastening parts (such as, but not limited to: self-locking nuts, etc.), if this replacement is not due to a manufacturing defect. This includes but is not limited to the following parts;
 - Drive pulley and driven pulley and belt, clutch, rollers, mobile flange, guides, chain, pinion, rear cog;
 - Bearings (wheels, rods, steering, engine, etc.);
 - Bulb, fuse, tyre, brake linings and pads, brake disc, cables and cable controls, spark plug and spark suppressor;
 - Shock absorbers (hydraulic, gas, single spring, elastomer), air filter, entire intake silencer, fuel filter, oil filter, cylinder, piston and piston segments;
 - Exhaust on combustion engine (except unwelded internal elements);
 - Liquids and products (grease, hydraulic fluid, brake fluid, gearbox oil, engine oil and coolant, etc.);
- Repairs resulting from the use of fuels, lubricants or grease other than those recommended by PEUGEOT MOTOCYCLES;
- Repairs resulting from negligence, abnormal use, driving on an impassable or damaged road, failure to follow the advice given in the PEUGEOT MOTOCYCLES service schedule or the user manual, overloading, even temporary, or the driver's lack of experience;

- Repairs due to an accident, theft, fire or natural causes (including, but not limited to hail, flooding, etc.);
- Repairs resulting from lack of vehicle cleanliness;
- Repairs resulting from long storage periods under unsuitable conditions;
- Corrosion or surface oxidation on the chassis, the screws, and, more generally, on all other metal parts, whether treated or not on combustion or electric vehicles (however, pitting corrosion is covered for a period of 24 months);
- The meter or optics for which the presence of steam does not alter information readability or lighting efficiency;
- Noises and vibrations which have no influence on the reliability, safety and road behaviour of the vehicle;
- Any other expenses not specifically included in this warranty or the legal compliance warranty or the legal warranty against hidden defects, such as, but not limited to: costs due to the vehicle being immobilised, loss of use or business, etc.

Geographical scope of application

The warranty is applicable in the countries or territories where the vehicle is marketed by the approved PEUGEOT MOTOCYCLES network (in particular, France, Germany, Italy, Spain) a list of which can be consulted on the manufacturer's website:




<http://www.peugeot-motocycles.com>

The vehicle is intended exclusively for sale and use in the above-mentioned countries and territories excluding all other countries or territories, where the applicable standards may be different to those in the above-mentioned countries and territories, such as, but not limited to, the United States of America, etc. Use of the vehicle in these excluded countries or territories is under the user's entire responsibility and excludes the application of this warranty as well as the vehicle manufacturer's responsibility for any reason whatsoever.

In some countries, especially in European Union Member States, the consumer has rights under the applicable national legislation. These rights are not affected by the warranty as defined above.



IMPORTANT**Products to use**

Fuel	Exclusively: Unleaded E5 or E10
	  
4 stroke engine oil	SAE 5W40 100% synthetic Minimum grade API SL
Relay box oil	SAE 80W90 API GL4
Grease	High-temperature grease Multi-use grease
Brake fluid	Brake fluid DOT 5.1
Coolant	Coolant: Motul type C Anti-corrosion and anti-freeze Protection -37°C/-35°F Nitrite free / Amine free / Phosphate free


Tyres

Tyre pressure should be cold-checked regularly. Incorrect pressure causes abnormal wear and affects road behaviour, thus making driving dangerous.

	Front	Rear
Solo	2.0 bars	2.5 bars
Pillion	2.0 bars	2.5 bars

Maintenance advice

Ensure that the servicing schedule for your vehicle is strictly followed to maintain your contractual warranty rights.

A table of inspections for the maintenance schedule is inserted into the maintenance booklet. The registered dealer must add his stamp, the date of servicing and the number of kilometres the vehicle has covered.

In order to maintain maximum safety and reliability of your vehicle, you are advised to have maintenance and repairs carried out by a registered dealer who has the necessary technical training, specific tools and spare parts.

After an accident, it is recommended to have the vehicle inspected and repaired by a registered dealer.

Cleaning the vehicle

The bodywork is made of plastic parts that can be painted or are shiny. Do not use solvents or cleaning products that are too corrosive.



Do not use high pressure cleaners which may cause water to infiltrate the following parts: seals, bearings and hinges, electrical components such as connectors, contactors and lighting.

Wash the bodywork with soapy water and rinse with generous amounts of clear water.

The vehicle can be dried with a chamois leather. After washing the vehicle, brake several times at low speed to dry out the brakes.



The vehicle should be washed in a place equipped for wastewater collection.

Certain silicon-based products can alter the quality of the paintwork.

In case of need or doubt, a registered dealer can advise you on using cleaning products or restoring scratched bodywork.

Environment / Recyclable

Worn parts replaced during routine maintenance (mechanical parts, battery, etc.) must be disposed of with specialised bodies.

At the end of its life, the vehicle must be taken to an authorised centre for recycling.

In all cases, comply with the local laws.



Batteries contain harmful substances. They must be disposed of according to the legal requirements and must under no circumstances be thrown away in the household waste.

Extended periods of immobilisation and storage

If the vehicle has to be immobilised for more than 1 months, you are advised to carry out the following operations:

Battery



If the vehicle is not used for an extended period, the battery will slowly discharge naturally or due to its electronics or certain accessories and must thus be regularly charged.

- Charge the battery to 100% beforehand (The battery's maximum charging current is equal to 1 tenth of its capacity).
- Use a maintenance charger or charge monthly.
- Before restarting, the battery must be charged to 100%.



If these recommendations are not followed, the battery may go into deep discharge. In this case the manufacturer's warranty will be void.

Machine

- Empty the fuel tank to avoid fuel build-ups.
- Spray a lubricant onto the metal parts of the vehicle to avoid oxidation.
- Store the vehicle in a dry place.

Re-starting your vehicle

 
You are advised to have the vehicle checked over by a registered dealer if it has been immobilized for an extended period.

QUICK-START GUIDE

Starting and driving

Smart Key key


The Smart Key key is an electronic key which is recognised by the system within a radius of 1.5 meters and:

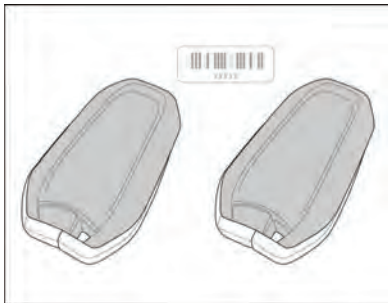

- Switches on the engine.
- Unlocks the storage compartment.

Emergency key

 An emergency key is integrated into the Smart Key key.

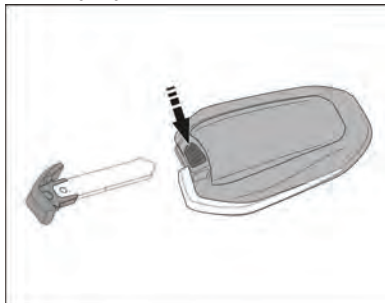


The emergency key is only used in exceptional cases to unlock the rear storage compartment if the vehicle battery is flat.

Rotating knob



 In certain conditions, the Smart Key key may not function if the vehicle is located in an area subjected to high electromagnetic radiation.

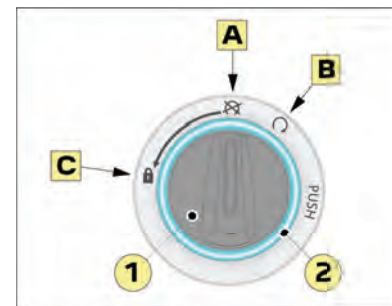


1. Rotating knob.
2. Lighted surround (Blue).

- A. **Stop position.**
- B. **On/start position.**
- C. **Steering unlocked.**

Starting the engine

For greater safety, place the vehicle on its central stand before starting the engine.

- The driver must carry the Smart Key key on his/her person.
- Press and hold the rotating knob for one second to wake up the system; the lighted surround lights up to indicate the presence of the Smart Key.
- Turn the rotating knob to ON. The lighted surround lights up steadily.
- Wait for the end of the instrument panel self-test.
- Ensure that the throttle is in the OFF position.
- Operate one of the brake levers while pressing the start button .
- Release the starter button as soon as the engine starts.

 
Engine cut-off

- Turn the rotating knob to OFF.

Driving

The vehicle is on its stand with the engine running.

- Squeeze the brake lever with your left hand, grip the grab handle with your right hand and push the vehicle forwards to fold up the central stand.
- Sit on the vehicle.
- Release the left brake and turn the throttle slowly with your right hand to start moving.

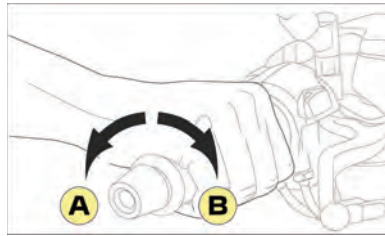

To accelerate, turn the throttle towards (A). To slow down, turn the throttle towards (B).

ABS braking system

The ABS braking system is linked to an integrated braking system operated by the brake pedal. The right lever acts on the front wheels. The left lever acts on the rear wheel.

Use of the brakes

- Close the throttle.
- Activate the brake system by gradually increasing the pressure.

Stopping the vehicle and parking

 
Stop the vehicle and switch of the engine by turning the rotating knob to "OFF". The vehicle should be preferably parked on flat ground.

- On the central stand or on its wheels with the Anti-Tilting system activated.



Always engage the electric parking brake and lock the steering each time the vehicle is parked.


If the vehicle is parked on a steep slope, you are advised to engage the electric parking brake, lock the steering and lock the wheels against the edge of the pavement as shown in the diagram below.

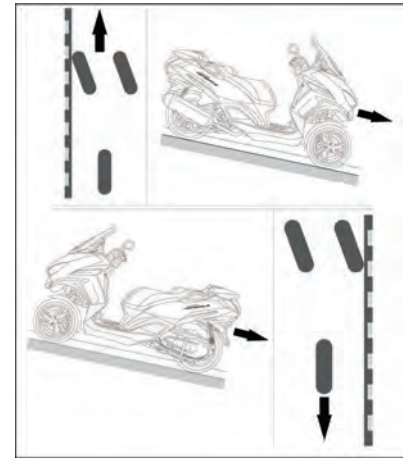

The parking brake and the Anti-Tilting might not hold the vehicle upright in all situations: Load on the vehicle, steep slope, prolonged immobilisation etc. Preferably park the vehicle on the central stand.

CONTROLS

 Right controls ■■

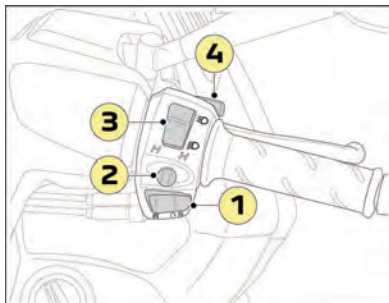

1. Emergency stop button/Starter switch.

2. Anti-tilting system ECU.

Push the switch to this position to lock the front axle. The warning light comes on with the emission of a long beep.

Push the switch to this position to unlock the front axle. The warning light goes off with the emission of 2 beeps.

 
3. Lighting switch / Daytime lights (DRL).

4. "SELECT" selection button.

This control enables:

- Access to the connectivity menu * (Press and hold for 2 seconds).
- Navigation within the menus (exiting a menu).
- Confirmation of a choice (Press and hold for 2 seconds).

Left controls ■■

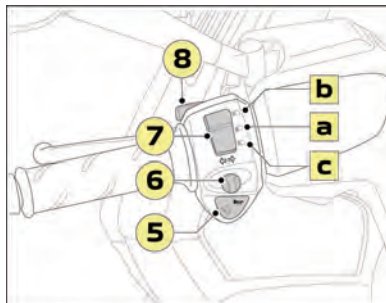

5. Horn switch.

6. Indicators switch.

7. Dipped light switch / High beam / Flushing the lights.

The dipped lights/headlights switch has 3 functions:

- a. Dip beam.
- b. High beam.
- c. Flushing the lights.

 
8. "EXIT" selection button.

This control enables:


- Access to the instrument panel personalisation menu (Press and hold for 2 seconds).
- Navigation within the menus (exiting a menu).
- Exiting a menu (Press and hold for 2 seconds).

Central controls ■■

Standard version

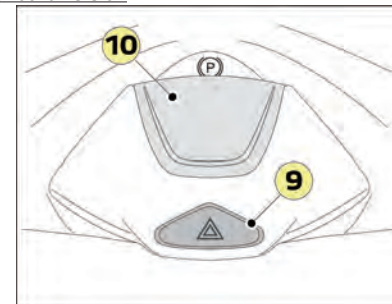

Version GT

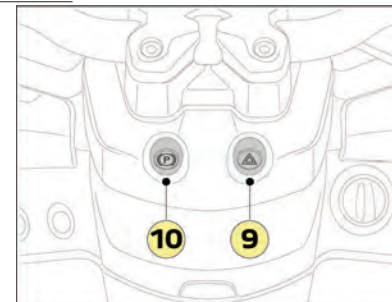 

- 9. Hazard warning light switch.**
- 10. Electric parking brake button.**

INSTRUMENTS



1. Digital display (I-CONNECT).
- 2 - Analogue speedometer.
- 3 - Revolution counter.
- 4 - Area displaying the warning lights / Operating lights.
- 5 - Brightness sensor.



Refer to the online user manual for further information.

Digital display



1. Date / Clock.
2. Fuel gauge.
3. Digital speedometer (km/h or mph).
4. Engine temperature gauge.
5. Engine lubrication warning light. ¹
6. Battery voltage.
7. Outside temperature gauge (°C or °F).
8. Tripmeter.
9. Average consumption indicator.
10. Autonomy indicator.
11. Maintenance indicator.
12. Milometer.



Refer to the online user manual for further information.

Warning lights

The warning lights inform the driver of the start-up of a system or appearance of a malfunction.



Refer to the online user manual for further information.



Emissions control system failure warning light / Engine self-diagnostic



Fixed / Flashing.
The anti-pollution system is faulty.



You are advised to have the vehicle checked by an authorised dealer.

GB

¹ Depending on equipment.

EQUIPMENTS



The user manual describes other equipment.

Pair a Bluetooth® telephone



Enable mobile Internet data on your smartphone (or wifi).

1. Download the PEUGEOT MOTOCYCLES app from the store corresponding to your smartphone.
2. Create an account.
3. From the "connectivity" menu, enable the vehicle's Bluetooth function.
4. Activate the Bluetooth function on your smartphone.
5. Open the PEUGEOT MOTOCYCLES application on your phone.
6. From the Settings tab, press "Scooters" and then "ADD A NEW SCOOTER".
7. Using your telephone key pad, enter the same PIN code displayed on the screen and confirm.



If connection fails (impossible to enter the pairing code, etc.):

- Shut down the Peugeot Motocycles app completely (check it is not running in the background).
- Check that there are no other connected smartphones nearby: disable its Bluetooth connection.
- Activate Bluetooth and restart the Peugeot Motocycles app on the smartphone to be paired.



 
Refer to the online user manual for further information.

Resetting the tripmeter

- Reset the tripmeter by simultaneously pressing the "SELECT" and "EXIT" controls for 3 seconds (Or via the "Personalisation - Configuration" menu).

Storage compartments

With the smart key present, press on a control button to unlock the corresponding storage compartment.

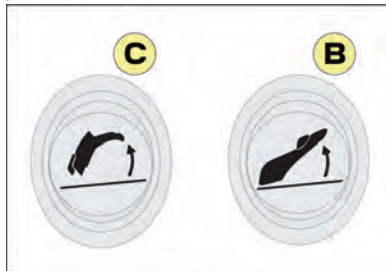


- B. Unlocking control for front storage compartment.
C. Unlocking control for rear storage compartment.



You are advised not to leave any objects in the storage compartments, whatever the value (helmet, document-holder, etc.), the manufacturer may not be held liable in the event of theft or intrusion.


Adjustable windshield

 This vehicle is fitted with a height-adjustable windshield.

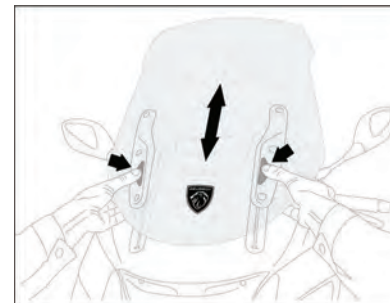

- Press simultaneously on the buttons and move the windshield up or down according to the desired position.
- Release the buttons and gently move the windshield to lock it into the notches.

 Storage compartment / Accessory socket (USB)

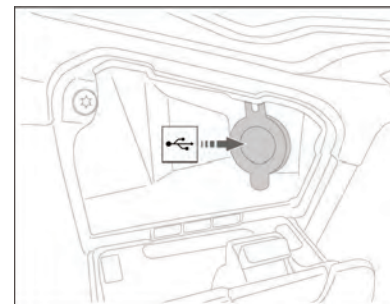

A USB socket fitted in the storage compartment, powered when the ignition is switched on, allows you to connect a mobile device (MP3 player, telephone, GPS, etc).

Rear storage compartment

Opening the storage compartment flap

- With the smart key present, press the control button to unlock the rear storage compartment.
- Lift the storage compartment flap up to the upper stop. It will remain in position*.

Closing the storage compartment flap

 
- Lower the storage compartment flap half way and allow it to lower under its own weight to lock it.



Risk of injury: Do not put your hands between the flap and the storage compartment while it is closing.

ADVICE

Fuel supply

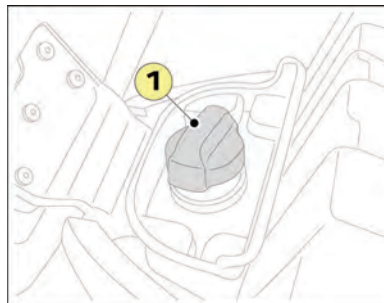

1. Fuel tank cap.

- Open the front storage compartment.
- Remove the tank cap.
- Insert the petrol pump nozzle into the filling orifice. Make sure the nozzle is correctly inserted into the filling pipe.
- Do not overfill the tank.

Stop filling when the nozzle stops for the first time.



Do not fill the fuel tank to excess: The fuel may expand due to the engine heat or heat from the sun and overflow.



 
Any overflows must be wiped up immediately. The fuel could actually damage painted surfaces or plastic parts.

Checking the engine oil level




Check the oil level every 1000km / 600Mi or before a long journey.

- To correctly measure the oil level, place the vehicle on the centre stand on flat ground.
- Start the engine, let it run for a few minutes and then stop it.
- After switching off the engine, wait for 5 minutes to allow the engine oil time to return to the oil sump.
- Remove the cap/oil gauge (1).

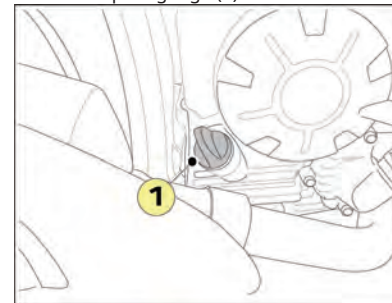

 - Wipe the filler cap/gauge using a clean cloth and reinsert it into the filler hole without screwing it up.
- Remove the filler cap/gauge and check the oil level.
- The oil level shall be between the minimum (A) and maximum (B) level marks without exceeding the latter.

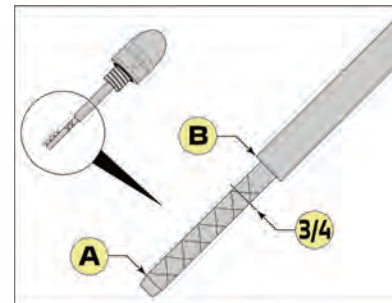

- If the oil level is close to the minimum mark or lower, you are advised to immediately top up the level to 3/4 in small amounts using the oil recommended by the manufacturer.



 
Too much oil will noticeably restrict the vehicle's performance.

No SMART KEY recognition



You are advised to read the full version of the user manual.

If the Smart Key is not recognised, the vehicle can be started using the following procedure.

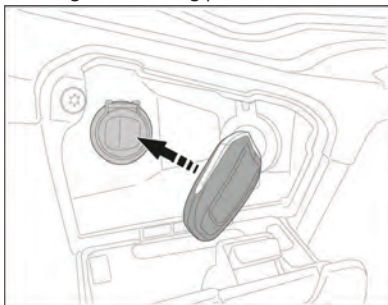

- Open the glove box.
- Hold the Smart Key against the emergency antenna.
- Press and hold the rotating knob for 2 seconds.
- Turn the rotating knob to "ON".
- The vehicle should start.

Possible causes of non-recognition:

- Low battery or incorrectly positioned.
- Radio disturbance.
- Damaged Smart Key.

PERIODIC SERVICING

Special important points:

- Compliance with the servicing schedule in light of the conditions of use will help keep your vehicle running smoothly over time and preserve its qualities, while being covered by the warranty. We recommend that you entrust these operations to an authorised Peugeot Motorcycles dealer who has been trained by the manufacturer and has suitable tools.
- There is no need for an annual test if a periodic test has been conducted during the year.
- From 25000 km (15600 mi), servicing must be performed by repeating operations from 5000 km (3100 mi).
- Clean or replace the air filter (engine/transmission) more often if the vehicle is used in particularly dusty or humid areas.

Heavy duty servicing / Harsh conditions of use (*):

You should service your vehicle more frequently if it is used in any of the following conditions:

Humid, dusty, high heat area, predominantly urban use, at temperatures frequently dropping below -5°C, Repeated short or door-to-door trips with a cold engine at a low temperature, etc.

Under these usage conditions, the mileages marked with an asterisk in the service schedule indicate the supplementary servicing operations to be carried out (as a minimum).

Vehicles used for commercial purposes (home deliveries, couriers, etc.) should, in particular, be subject to heavy duty servicing (The servicing frequency in terms of mileage should be halved).

Care / Cleanliness:

In light of the design and aesthetic appeal of a two-wheeled vehicle, numerous components are exposed to the elements. This vulnerability may result in functional or cosmetic damage (corrosion, etc.), even on high-quality parts. This is why proper regular servicing helps not only preserve its

appearance, smooth running and your enjoyment; it is also essential to maintain your Warranty rights.

SERVICE SCHEDULE

Servicing must be performed by a PEUGEOT MOTOCYCLES registered representative.










GB

Operations to be carried out	1000km 600mi Or 1 months	5000km* 3100mi*	10000km 6200mi	15000km* 9400mi*	20000km 12400mi	Annual maintenance
Engine						
Engine oil	R	R	R	R	R	R
Oil filter	R	R	R	R	R	
Valve clearances	I Every 40000 km / 25000 mi					
Spark plug			R		R	
Intake air filter	R Every 10000 km (5000 km if harsh use servicing)					I
Intake silencer drain			C		C	C
Transmission air filter	R Every 10000 km (5000 km if harsh use servicing)					
Drive pulley / Flange wear			I		I	
Drive pulley rollers and guides			I		I	
Transmission belt			R		R	
Driven pulley caged needle bearing			L		L	
Clutch lining wear			I		I	
Driven pulley			I		I	
Coolant level	I		I		I	I
Cooling system radiator			C		C	
Coolant	R Once every 4 years					
Petrol filter			R		R	
Petrol pipe: No leaks or cracks	I	I	I	I	I	I
Canister unit, canister valves and hoses			I		I	
*: Heavy duty servicing.	I: Inspect, clean, adjust, replace if necessary.			C: Clean, replace if necessary.		
	R: Change.			L: Lubricate, oil		

Operations to be carried out	1000km 600mi Or 1 months	5000km* 3100mi*	10000km 6200mi	15000km* 9400mi*	20000km 12400mi	Annual maintenance
Cycle part						
Steering: No sticking point / No play	I	I	I	I	I	
Wheels: Condition and runout / No play	I	I	I	I	I	
Tyres: No cracks, wear and pressure	I	I	I	I	I	I
Front suspension / Ball joints / Bearings: Condition, operation and no leakage	I	I	I	I	I	
Front axle tilt end-stop	I		I		I	
Anti-Tilting: Operation / Condition of control for	I		I		I	
Anti-tilting calliper: Cleanliness, Guide pins, Functioning	I		I + L		I + L	
Rear suspension: Condition, operation and no leakage	I	I	I	I	I	
Engine hinge			I		I	
Throttle control: Operation, play and lubrication	I	I + L	I + L	I + L	I + L	
Operation of emergency lock	I		I		I	
Moving parts and cables	L		L		L	
Kickstands: Operation and lubrication	I + L	I + L	I + L	I + L	I + L	
Tightness of nuts and bolts	I		I	I	I	
Braking system						
Brake fluid level / No leakage	I	I	I	I	I	I
Brake fluid	R Once every 2 years					
Brake calipers: Cleanliness, Guide pins, Functioning	I	I + L	I + L	I + L	I + L	
Brake pad wear	I	I	I	I	I	
Brake disk wear	I	I	I	I	I	
Brake hoses: No leaks or cracks	I	I	I	I	I	
Brake levers / Brake pedal	L		L		L	
Parking brake: Operation / Condition of control for / Setting	I		I		I	
*: Heavy duty servicing.	I: Inspect, clean, adjust, replace if necessary. R: Change.			C: Clean, replace if necessary. L: Lubricate, oil		

GB

Operations to be carried out	1000km 600mi Or 1 months	5000km* 3100mi*	10000km 6200mi	15000km* 9400mi*	20000km 12400mi	Annual maintenance
Electrical equipment						
Lighting and signalling	I	I	I	I	I	I
Headlight height adjustment	I		I		I	
Brake light switches	I	I	I	I	I	I
Smart Key battery	R Once every 2 years					
Battery: Charge level and no leakage	I	I	I	I	I	I
Miscellaneous						
Processors: Reading of fault codes and update	I	I	I	I	I	
Overall operation: Road test	I	I	I	I	I	I
*: Heavy duty servicing.	I: Inspect, clean, adjust, replace if necessary. R: Change.			C: Clean, replace if necessary. L: Lubricate, oil		
Servicing time in tenths of an hour (0.5 h = 30 mn)						
Reception and Treatment	0.1	0.1	0.1	0.1	0.1	0.1
Metropolis	1	0.8	2.5	0.8	2.5	0.6
Maintenance times are indicative. They do not take into account the replacement of wear parts.						

<p>_____ km</p> <p>_____ <i>mi</i></p> <p> _____ / _____ / _____</p>	<p>_____ km</p> <p>_____ <i>mi</i></p> <p> _____ / _____ / _____</p>	<p>_____ km</p> <p>_____ <i>mi</i></p> <p> _____ / _____ / _____</p>
<p>_____ km</p> <p>_____ <i>mi</i></p> <p> _____ / _____ / _____</p>	<p>_____ km</p> <p>_____ <i>mi</i></p> <p> _____ / _____ / _____</p>	<p>_____ km</p> <p>_____ <i>mi</i></p> <p> _____ / _____ / _____</p>
<p>_____ km</p> <p>_____ <i>mi</i></p> <p> _____ / _____ / _____</p>	<p>_____ km</p> <p>_____ <i>mi</i></p> <p> _____ / _____ / _____</p>	<p>_____ km</p> <p>_____ <i>mi</i></p> <p> _____ / _____ / _____</p>

- FR
- GB
- DE
- IT
- ES
- NL
- GR
- SE
- PT
- TR
- CZ

FR

GB

DE

IT

ES

NL


GR


SE


PT


TR


CZ


_____ km
 _____ *mi*
 _____ / _____ / _____


_____ km
 _____ *mi*
 _____ / _____ / _____


_____ km
 _____ *mi*
 _____ / _____ / _____


_____ km
 _____ *mi*
 _____ / _____ / _____


_____ km
 _____ *mi*
 _____ / _____ / _____

_____ km
 _____ *mi*
 _____ / _____ / _____

_____ km
 _____ *mi*
 _____ / _____ / _____

_____ km
 _____ *mi*
 _____ / _____ / _____

_____ km
 _____ *mi*
 _____ / _____ / _____

_____ km _____ mi	
_____ km _____ mi	
_____ km _____ mi	
_____ km _____ mi	
_____ km _____ mi	
_____ km _____ mi	
_____ km _____ mi	
_____ km _____ mi	
_____ km _____ mi	

FR

GB

DE

IT

ES

NL

GR

SE

 
PT

TR

CZ

FR

_____ km
_____ *mi*



GB

_____ km
_____ *mi*



DE

_____ km
_____ *mi*



 
IT

_____ km
_____ *mi*



ES

_____ km
_____ *mi*




NL

_____ km
_____ *mi*



GR

 _____ km
_____ *mi*



SE

_____ km
_____ *mi*



PT

_____ km
_____ *mi*



TR

_____ km
_____ *mi*



CZ

Peugeot Motocycles recommends



Quality management system certified ISO
9001 by UTAC



Peugeot Motocycles SA
Rue du 17 Novembre
F-25350 Mandeuve

Tél. +33(0)3 81 36 80 00

RCS Belfort B 875 550 667

www.peugeot-motocycles.fr
www.peugeot-motocycles.com

0 800 007 216 Service & appel
gratuits

Dans un souci constant d'amélioration Peugeot Motocycles se réserve le droit de supprimer, modifier ou ajouter toutes références citées.
DQ/APV du 02/2024 (photos non contractuelles).



PEUGEOT MOTOCYCLES



Guide d'utilisation en ligne
Online user's guide

i-Connect® : application Peugeot Motocycles disponible sur
i-Connect® : Peugeot Motocycles app available on

