



PEUGEOT  
MOTOCYCLES

# **SPEEDFIGHT**

Notice d'utilisation  
Owner's manual





**Welcome**





**TABLE OF CONTENTS**

Information..... 1  
 Safety advice..... 1  
 Characteristics..... 2  
 Vehicle identification.....6  
     Products to use..... 6  
 Information about the instructions..... 7  
 Description of the vehicle.....8  
 Controls..... 9  
 Key-operated ignition switch functions.....9  
 Instruments.....10  
     Display functions..... 10  
 Equipments..... 11  
     USB socket (depending on model)..... 11  
 Checks to perform before use.....12  
 Advice for starting up and driving.....12  
     Warning..... 12  
     Eco mode..... 12  
     Driving on flooded roads..... 12  
     Inspection before setting off.....13  
     Starting the engine.....13  
     Driving.....13  
     Braking.....13  
     Switching off the engine and parking..... 13  
     Fuel supply.....14  
     Running in the engine.....14  
 Service operations.....15  
     Maintenance advice.....15  
     Environment / Recycling..... 15  
     Cleaning the vehicle..... 15  
     Spark plug inspection or replacement.....15  
     Checking the engine oil level..... 16  
     Changing the engine oil.....16  
     Draining the relay box..... 17  
     Replacing the air filter.....17  
     Throttle cable play..... 17

Tyres..... 18  
 Brake inspection..... 18  
 Brake fluid..... 19  
 Battery.....19  
 Fuses.....20  
 Bulb replacement.....21  
 Headlight adjustment.....21

GB

## INFORMATION

You have just bought a Peugeot vehicle.

We would like to thank you for purchasing one of our products.

Please take some time to read this manual carefully before using the vehicle.

This user manual should always be kept in the boot of the vehicle. It contains instructions for use, checks and maintenance of the vehicle, and important safety instructions intended to protect the user and third parties against accidents.

It will give you plenty of advice on how to keep your vehicle in full working order.

Your vehicle is built to last but this does not mean that it does not require a minimum amount of maintenance.

Your authorised dealer is familiar with all the vehicle's characteristics and has genuine spare parts and specific tools. He can advise you and service your vehicle in the best conditions according to the established service schedule to ensure that you can enjoy driving it in complete safety.

This manual must be considered as an integral part of the vehicle and must remain with it even if the vehicle is sold on.

In our permanent concern to make improvements PEUGEOT MOTOCYCLES reserves the right to suppress, modify, or add any reference mentioned. Reproductions or translations, even partial, of this document, are not permitted without the written authorization of PEUGEOT MOTOCYCLES.

## SAFETY ADVICE

A inexperienced motorcyclist should make himself completely familiar with his vehicle before going out in traffic. You are strongly advised not to lend your vehicle to an inexperienced rider.

To ride a motorbike, you are required by law to hold a licence or to have completed specific training with a professional, depending on the applicable legislation and based on its category.

Wearing an approved helmet and gloves is obligatory for the user and passenger. You are also advised to wear goggles and light-coloured or reflective clothing adapted to motorcycling.

In some countries, the applicable legislation may not authorise transportation of a passenger, and elsewhere it may oblige motorcycle users to contract a civil liability insurance policy to protect third parties and the passenger against potential damage resulting from an accident.

Driving whilst under the influence of alcohol, drugs or certain medicines is inexcusable and dangerous for yourself and others.

Excessive speed is an important factor in many accidents. You must observe the road signs and signals and adapt your speed to the weather conditions.

The engine and the exhaust system components can reach very high temperatures. When parking your vehicle, be careful to avoid contact with inflammable materials which could cause a fire or with parts of the body which could result in serious burns.

Luggage carriers and panniers approved by PEUGEOT MOTOCYCLES are available as options (depending on the model). The assembly instructions must be complied with and the maximum permissible load (3 to 5 kg depending on the equipment) must not be exceeded.

Fitting accessories such as the driver's apron, top-case, etc. may affect the vehicle's stability (wind factor, load, etc.).

When riding the vehicle fitted with accessories, the driver should reduce speed.

Parking in the sun: The reflection of the sun's rays on the windshield can, at certain times of the day, create a high temperature on the dashboard. This can lead to warping. To prevent this, do not park the vehicle in the sun.

Mounting adaptable parts that have not been approved by PEUGEOT MOTOCYCLES, which alter the technical characteristics or performances of the vehicle is forbidden. Any modification will invalidate the warranty and the vehicle will no longer be in compliance with the version approved by the appropriate services.


The presence of mist on the inside of the headlight glass is normal. It disappears a few minutes after the lights are switched on.

GB

## CHARACTERISTICS

		SPEEDFIGHT
Official type-approval code		F1ADKA
<b>Weight in kg</b>		
Unladen weight		100
In working order		107
Authorised maximum. Total weight of the vehicle, the user, the passenger, the accessories and luggage.		270

### Dimensions in mm

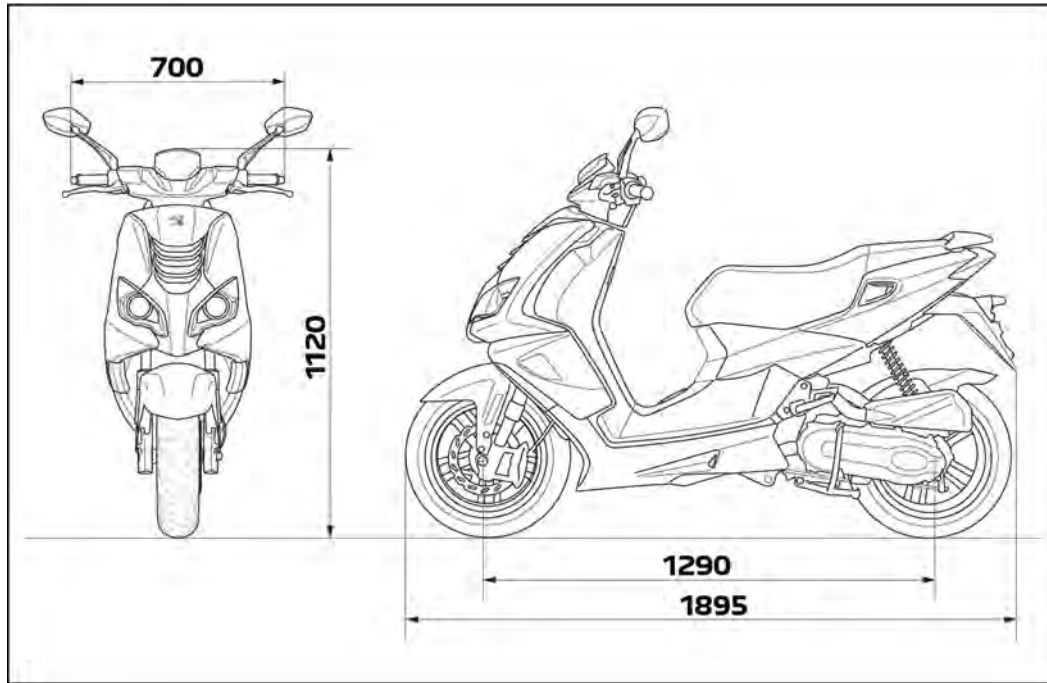

	<b>SPEEDFIGHT</b>
Official type-approval code	F1ADKA
<b>Engine</b>	
Identification	XS1P37QMA-4
Engine type	4-stroke single-cylinder. 2 valves.
Cubic capacity	49.4 cc
Bore x stroke in mm	37 x 46 mm
Maximum power	2.2 kW at 8000 rpm
Maximum torque	3.0 Nm at 6250 rpm
Cooling	By forced-air circulation
Fuel supply	Indirect electronic injection (EFI)
Spark plug	NGK CR6HSA
Lubrication	Pressurised wet sump lubrication
Exhaust	Catalytic
Anti-pollution standard	Euro 5+
Consumption <sup>a</sup>	2.4 l/100
CO <sup>2</sup> emission (On cycle)	54 g/km

<sup>a</sup> These consumption values are established according to Regulation 134/2014 Appendix VII. They may vary according to driving behaviour, traffic conditions, weather conditions, the load in the vehicle, vehicle maintenance and use of the accessories etc.


		SPEEDFIGHT
Official type-approval code		F1ADKA
<b>Capacities in litres</b>		
Engine oil		0.8
Relay box oil		0.12
Fuel tank		7.4
Fork oil <sup>a</sup>		0.11
<b>Tyre dimensions</b>		
Front		130/60 - 13
Minimum load index and speed rating		37B
Rear		130/60 - 13
Minimum load index and speed rating		51B
<b>Pressure in bars</b>		
Front	Solo	1.8
	Pillion	1.8
Rear	Solo	2
	Pillion	2.2

<sup>a</sup> Depending on model.

<b>SPEEDFIGHT</b>	
Official type-approval code	F1ADKA
<b>Suspension</b>	
Front	Inverted telescopic fork Ø27 mm <sup>a</sup> Travel: 73 mm Or 32 mm Ø telescopic front fork <sup>a</sup> Travel: 85 mm
Rear	1 shock absorber. Travel: 68 mm
<b>Brakes</b>	
Front	1 disc Ø215 mm
Rear	1 drum Ø110 mm
<b>Electrical equipment</b>	
Headlights	12V - 35W (H8)
"Side light" bulbs	LED
Indicator bulbs	12V-2.3W or LED
Rear light	12V-21/5W or LED
Number plate light	12V-5W or LED
Battery	12V - 6Ah BS BATTERY BTX7A No maintenance

<sup>a</sup> Depending on model

**VEHICLE IDENTIFICATION**

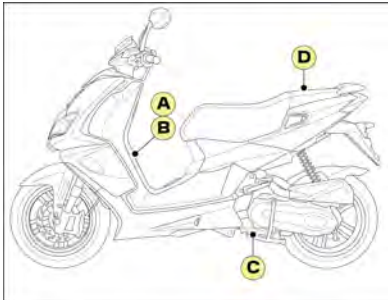

- A. Manufacturer's plate.
- B. Vehicle identification number (V.I.N.).
- C. Engine number.
- D. Tyre pressure label.

The label affixed under the saddle gives the cold tyre pressures when riding alone and with a passenger.

✓ Temperature variations modify tyre pressure.  
The tyre pressure must be checked once a month when cold.

**Products to use**


**Fuel**

Exclusively: Unleaded E5 or E10



**Engine oil**

SAE 10W40 / SAE 10W50  
100% synthetic  
Minimum API SN quality

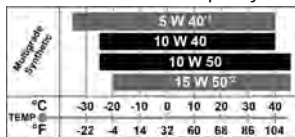

\* Recommended if:

- <sup>1</sup> Minimum annual temperature < -20°C
- <sup>2</sup> Minimum annual temperature > 0°C

**Relay box oil**

SAE 80W90 API GL4

**Grease**

High-temperature grease  
Multi-use grease

**Brake fluid**

Brake fluid DOT 4

**Fork oil**

SAE 10W

## INFORMATION ABOUT THE INSTRUCTIONS

Specific information is indicated by the following symbols:



Möbius band  
Recyclable.

Means that the product or the package can be recycled.



Explosive

The product may explode upon contact with a naked flame, spark or static electricity, or due to the effect of heat, an impact or friction.

Handle and keep away from heat sources and other causes of sparks.



Flammable

The product may ignite in contact with a naked flame, a spark or static electricity, or due to the effect of heat, friction, in contact with the air or in contact with water, releasing inflammable gases.

Handle and keep away from heat sources and other causes of sparks.



Corrosive

The product is corrosive.

It can attack (corrode) or destroy metals.

Contact with the product or splashes of the product may burn the skin and cause lesions to the eyes. Avoid any contact with the eyes and skin. Do not inhale.



Harmful to health

The product can be poisonous in high doses.

It may irritate the skin, eyes and airways.

It may cause skin allergies.

It may cause drowsiness or dizziness. Avoid all contact with the product.



Toxic or fatal

The product can rapidly be fatal.

It poisons rapidly, even at low doses. Wear protective equipment.

Avoid any contact (oral, skin, inhalation) with the product and wash all exposed areas carefully after use.



Harmful for the environment

The product pollutes.

It has a harmful effect (in the short and/or long term) on organisms in aquatic environments.

Do not dispose of it in the environment.



Do not throw away into a garbage can

One of the product's component is toxic and can be hazardous to environment. Do not throw the used product in the dustbin. Take it back to the trader or to a specific waste disposal site.



People's safety

Operation that can be dangerous for people.

People's safety can be seriously affected if the recommendations are not fully respected.



Important

Operation that can be hazardous to the vehicle.

Indicate the specific procedures that shall be followed in order not to damage the vehicle.



Note

Gives key information concerning operation of the vehicle.

GB


## DESCRIPTION OF THE VEHICLE

1. Instrument panel
2. Brake levers
3. Utility hanger
4. USB socket<sup>1</sup>
5. Saddle storage compartment
6. Battery
7. Fuses
8. Grab handle
9. Central stand
10. Passenger footrests
11. Throttle
12. Ignition switch / Opening of the saddle
13. Fuel tank flap
14. Brake fluid level
15. Engine oil level



<sup>1</sup> Depending on model

## CONTROLS

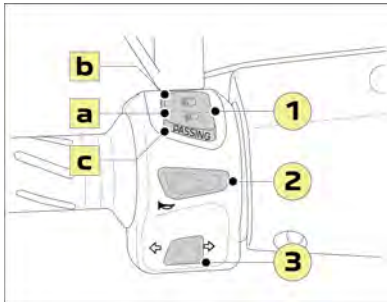

### 1. Dipped lights/Headlights switch

The dipped lights/headlights switch has 3 functions:

- a. High beam.
- b. Dip beam.
- c. Flashing the lights (Passing).


### 2. Horn switch

### 3. Indicators switch

To indicate a change of direction, press the switch:

- Either to the right.
- Or to the left.


To stop the indicators flashing, press the switch.

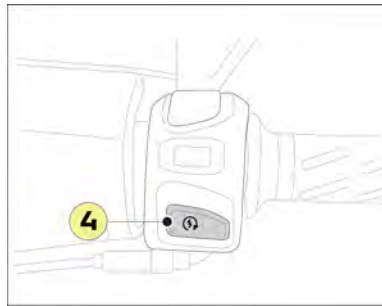

### 4. Starter switch

## KEY-OPERATED IGNITION SWITCH FUNCTIONS

2 keys are delivered with the vehicle.

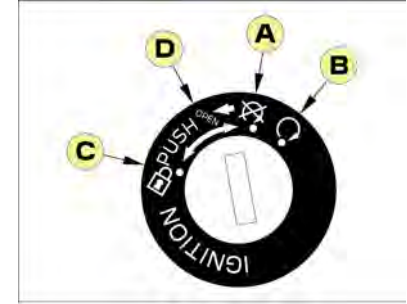

- A.** The engine is off. Power to the electrical circuit is off. The key can be removed.
- B.** Power to the electrical circuit is on. The engine can be started. The key cannot be removed.
- C.** Power to the electrical circuit is off. The handlebars are turned to the left. Steering can be locked. The key can be removed.
- D.** Power to the electrical circuit is off. Action of the key in this position allows you to open the saddle with a cable device.

GB

## INSTRUMENTS



1. Multi-function display
2. Direction indicator warning light
3. Emissions control system failure warning light (ML. Malfunction Indicator Lamp)
  - If the indicator light turns on when riding, you are advised to have the vehicle checked by an authorised dealer.
4. Main beam control
- A. Display control knob

## Display functions



## 5. Speedometer


- The vehicle's speed is displayed in km or miles according to the adjustment.

## Choosing the display units



Choosing the distance unit is possible at any time.


- With the ignition off, hold down the settings button (A), switch on the ignition and wait for the multifunction display to come on.

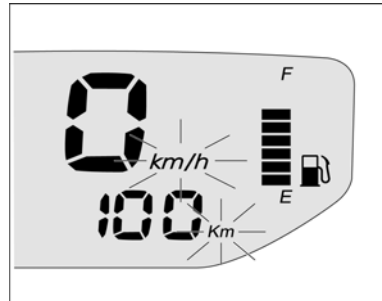

- Select the unit by briefly pressing the control button, the distance unit changes from "km" to "miles" or inversely.

- Turn off the ignition.

## 6. Fuel gauge / Fuel reserve gauge

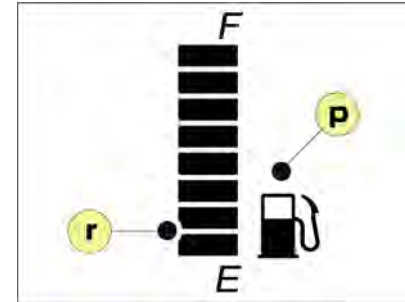

When the fuel tank is full all the segments of the fuel gauge are lit.

The fuel reserve gauge corresponds to the two last segments (r) which show two reserve levels.

- 1st level: the two segments flash.
- 2nd level: the last segment flashes. When the tank is empty, all the segments on the fuel gauge are off and the "pump" symbol flashes (P).



If all the segments flash, the diagnostic function has detected an anomaly on the fuel gauge system. The system must be checked by an authorised dealer.

## 7. Milometer / Tripmeter (TRIP)

- The tripmeter displays and stores the number of kilometres travelled by the vehicle. The machine total kilometres remains in the memory when the battery is disconnected.
- The tripmeter displays and stores the number of kilometers travelled during a given period.

### Changing from the total distance display to the daily distance display.

- With the ignition on, switching from the total distance display to the daily tripmeter and vice-versa is done by briefly pressing the control button (A).

### Resetting the tripmeter

- The daily counter is reset by pressing more than 3 seconds on the control button (A).

## 8. Maintenance indicator

- The maintenance indicator appears on the display each time the service recommended by the manufacturer is due.

Maintenance frequency
5000 km

### Maintenance counter reset

- Ignition off, hold down the control button (A) and turn on the ignition, the distance unit flashes.
- Release the settings button.
- Hold down the settings button for more than 5 seconds to switch off the maintenance symbol and set the maintenance counter to zero.
- Turn off the ignition.




You are advised to go to an authorised dealer to have the vehicle serviced and the message on the maintenance indicator erased.

## EQUIPMENTS

### USB socket (depending on model)


A 6W-500mA-W maximum USB socket, powered when the ignition is turned on, is placed in the handlebar housing.

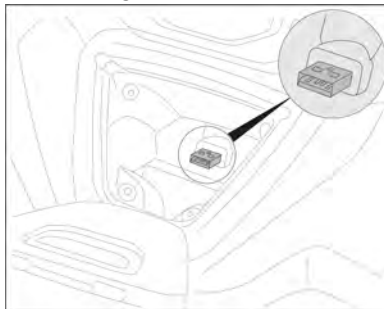


It can be used to connect low-voltage devices (mobile phone, GPS, etc.).

A telephone or GPS holder can be attached to the cover of the housing etc.

- Open the cover by pushing the trigger downwards.

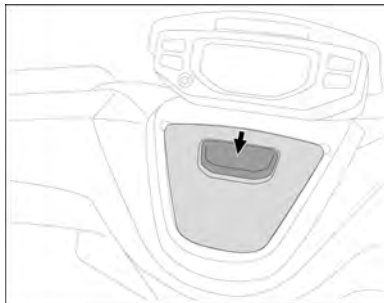

- Turn the cover over and remove the bracket tightening nut (1).
- Fit and tighten the device holder (sold separately).

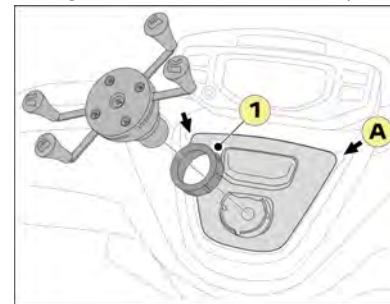

- Connect the USB cord for your device to the vehicle's socket.
- Replace the cover, passing the cord through the hole provided (A).

GB

## CHECKS TO PERFORM BEFORE USE

The user must personally ensure that his vehicle is in good condition. Certain safety elements may show signs of damage even when the vehicle is not used. e.g. prolonged exposure to bad weather can lead to oxidation in the braking system or a pressure drop in the tyres which can have serious consequences. In addition to a simple visual inspection, it is extremely important to check the following points before use.



These checks only take a few minutes and help to keep your vehicle in good condition, for optimum use combining reliability and safety.

If one of the elements in the checklist does not work properly, ask your registered dealer to check it and have it repaired if necessary before using the vehicle.

## ADVICE FOR STARTING UP AND DRIVING

### Warning

Before using the vehicle for the first time, make sure you are familiar with all the controls and their respective uses. If you are not sure about the functions of any of the controls, your registered dealer can answer your questions and give you any help you may require.



As exhaust fumes are toxic, the engine must be started in a well-ventilated area. It must never be allowed to run in a closed space, even for a short time.

### Eco mode

Adopt smooth driving behaviour

- Turn the acceleration handle gradually, not suddenly.
- Anticipate braking using the engine brake.
- Limit the vehicle load as well as aerodynamic resistance.
- Regularly check the inflation pressure in your tyres, and refer to the label under the seat.
- Avoid heating up the engine while stationary: the engine heats quicker when you drive.
- Have your vehicle serviced according to the manufacturer's maintenance plan.


**These attitudes contribute to economising fuel consumption, reducing CO<sup>2</sup> emissions and alleviating the background sound of traffic.**

## Driving on flooded roads



You are strongly advised not to drive on flooded roads as this may seriously damage the engine, transmission and electrical systems on your vehicle.

**10 km/h - 6 mph MAX**

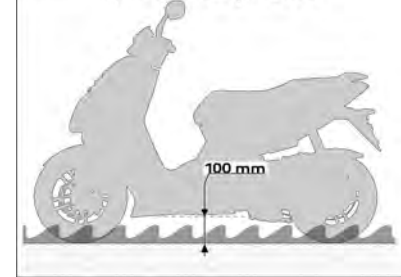

If you cannot avoid driving through flood water:

- Check that the water depth does not exceed 100 mm, taking into account waves which could be generated by other road users.
- Under no circumstances exceed a speed of 10 km/h.
- Once out of the flooded area, brake gently several times to dry out the brakes as soon as the safety conditions allow it.

## Inspection before setting off

Component	Checks
Fuel	<ul style="list-style-type: none"> <li>• Check the fuel level in the tank.</li> <li>• Top up with fuel if necessary.</li> <li>• Check that there is no fuel leak.</li> </ul>
Engine oil	<ul style="list-style-type: none"> <li>• Check the level of the engine oil.</li> <li>• If necessary, top up with the recommended oil.</li> </ul>
Disk brakes	<ul style="list-style-type: none"> <li>• Check brake operation.</li> <li>• Have an approved dealer check them if they feel soft.</li> <li>• Check brake pad wear.</li> <li>• Check the level of brake fluid in the reservoir.</li> </ul>
Drum brakes	<ul style="list-style-type: none"> <li>• Check brake operation.</li> <li>• If necessary adjust the control.</li> <li>• Check the wear on the brake linings.</li> <li>• Correct if necessary.</li> </ul>
Lighting, signalling, indicators, horn	<ul style="list-style-type: none"> <li>• Check operation.</li> <li>• Correct if necessary.</li> </ul>
Wheels and tyres	<ul style="list-style-type: none"> <li>• Check the tyre wear and condition.</li> <li>• Check the tyre pressures cold.</li> <li>• Correct if necessary.</li> </ul>
Throttle	<ul style="list-style-type: none"> <li>• Check the throttle handle turns smoothly and returns correctly to its starting position.</li> </ul>
Steering	<ul style="list-style-type: none"> <li>• Check the free rotation of the steering.</li> </ul>
Stand	<ul style="list-style-type: none"> <li>• Check that the central stand can be unfolded smoothly.</li> </ul>

## Starting the engine

For greater safety, place the vehicle on its central stand before starting the engine.

- Turn the ignition key to "ON".
- Ensure that the throttle is in the OFF position.
- Press one of the brake levers while pressing the starter button. Do not press the starter for more than 10 seconds.
- Release the starter button as soon as the engine starts.



If the engine does not start, release the starter button and the brake lever, wait a few seconds and try again.

To kick start, place the vehicle on its central stand.

- Turn the ignition key to "ON".
- Ensure that the throttle is in the OFF position.
- Grip the grab handle with your right hand.
- Operate the kick-start until the engine starts.


## Driving

### Starting off

The vehicle is on its stand with the engine running.

- Squeeze the brake lever with your left hand, grip the grab handle with your right hand and push the vehicle forwards to fold up the central stand.
- Sit on the vehicle.
- Release the left brake and turn the throttle slowly with your right hand to start moving.

## Accelerating and decelerating

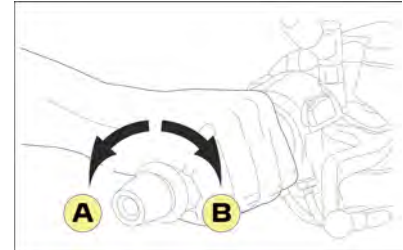

To accelerate, turn the throttle towards (A). To slow down, turn the throttle towards (B).

## Braking

### Use of the brakes

For good braking, it is very important to coordinate the following actions:

- Close the throttle.
- Operate the left and right brake levers simultaneously and slowly increase the pressure.



Using only one brake reduces braking efficiency and can lock the wheel, causing a fall.

Braking suddenly on a wet road or in a bend should be avoided.

Reduce speed on steep slopes to avoid prolonged braking, as overheating will reduce braking efficiency.

### Switching off the engine and parking

The engine is switched off when at idling speed by turning the ignition key to "OFF".

The vehicle should be parked on the central stand on flat ground.

Each time the vehicle is parked, the steering should be locked and the ignition key removed.

 
## Fuel supply




The engine must be switched off in order to fill the fuel tank in complete safety.

GB

A label affixed near the fuel cap reminds you of the type of fuel to use.



- Place the vehicle on the central stand.
- Remove the tank cap.

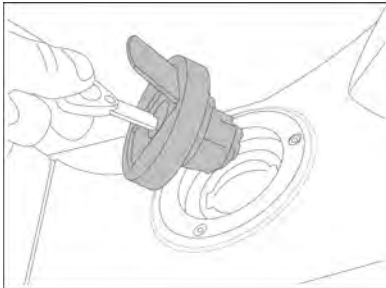

When filling up with fuel, ensure the end of the nozzle is correctly inserted into the filling orifice on the fuel tank.



Do not fill the fuel tank to excess: The fuel may expand due to the engine heat or heat from the sun and overflow.



Any overflows must be wiped up immediately. The fuel could actually damage painted surfaces or plastic parts.

## Running in the engine

Running in the engine is essential to guarantee its performance and lifetime.

During the running-in period, you are advised not to overload the engine and to avoid exceeding a higher than normal operating temperature.

From 0 to 500 km:	<ul style="list-style-type: none"><li>• Do not hold the throttle handle open at more than half its distance of travel over a long trip.</li></ul>
From 500 to 1000 km:	<ul style="list-style-type: none"><li>• Do not hold the throttle handle open at more than 3/4 its distance of travel over a long trip.</li></ul>

Once this mileage has been done, the vehicle can be used normally.

## SERVICE OPERATIONS

### Maintenance advice

**Ensure the servicing schedule for your vehicle is strictly adhered to in order to maintain warranty rights.**

A table of inspections for the maintenance schedule is inserted into the maintenance booklet. The registered dealer must add his stamp, the date of servicing and the number of kilometres the vehicle has covered.

**In order to maintain maximum safety and reliability of your vehicle, you are advised to have maintenance and repairs carried out by a registered dealer who has the necessary technical training, specific tools and spare parts.**

### Environment / Recycling

Worn parts replaced during routine maintenance (mechanical parts, battery, etc.) must be disposed of with specialised bodies.

At the end of its life, the vehicle must be taken to an authorised centre for recycling.

In all cases, comply with the local laws.



Batteries contain harmful substances. They must be disposed of according to the legal requirements and must under no circumstances be thrown away in the household waste.

## Cleaning the vehicle



The bodywork is made of plastic parts that can be painted or are shiny. Do not use solvents or cleaning products that are too corrosive.



Do not use high pressure cleaners which may cause water to infiltrate the following parts: seals, bearings and hinges, electrical components such as connectors, contactors and lighting.

Wash the bodywork with soapy water and rinse with generous amounts of clear water.

The vehicle can be dried with a chamois leather. After washing the vehicle, brake several times at low speed to dry out the brakes.



The vehicle should be washed in a place equipped for wastewater collection.

Certain silicon-based products can alter the quality of the paintwork. In case of need or doubt, a registered dealer can advise you on using cleaning products or restoring scratched bodywork.


### Spark plug inspection or replacement



It is essential to use a resistive spark suppressor and a resistive spark plug in accordance with the manufacturer's recommendations.

The engine must be cold.

- Remove the saddle storage compartment.
- Disconnect the suppressor.
- Remove the spark plug.
- Measure the distance between the electrodes and correct it if necessary (A).

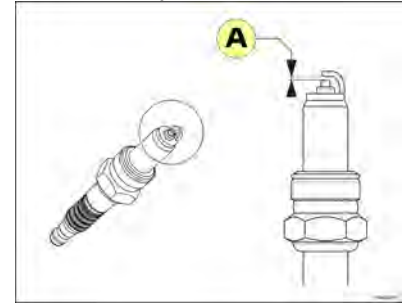

A. Electrode gap.

Spark plug
NGK CR6HSA
Electrode gap
0.7 to 0.8 mm
Tightening torque
12 Nm

- Fit and screw in the spark plug manually.
  - Tighten to the recommended torque.
- If not tightening using a torque wrench, tighten according to the following method:
- 1/8 - 1/4 turn for a reused spark plug.
  - 1/2 turn for a new spark plug.



Ensure the suppressor is correctly clipped onto the spark plug. Have the torque quickly checked by a registered dealer.

GB


## Checking the engine oil level



Check the oil level every 1000 km / 600 Mi or before a long journey.


GB

- To correctly measure the oil level, place the vehicle on the centre stand on flat ground.
- Start the engine, let it run for a few minutes and then stop it.
- After switching off the engine, wait for 5 minutes to allow the engine oil time to return to the oil sump.
- Remove the oil filler cap/gauge (1).

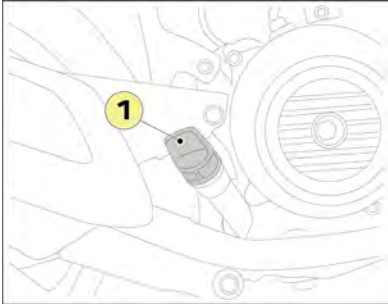

- Wipe the filler cap/gauge using a clean cloth and reinsert it into the filler hole without screwing it up.

- Remove the filler cap/gauge and check the oil level.
- The oil level shall be between the minimum (A) and maximum (B) level marks without exceeding the latter.

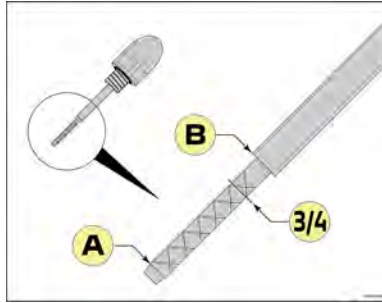

- If the oil level is close to the minimum mark or lower, you are advised to immediately top up the level to 3/4 in small amounts using the oil recommended by the manufacturer.



Too much oil will noticeably restrict the vehicle's performance.

## Changing the engine oil



We advise you to go to a registered dealer for draining.



Oil contains substances which are harmful to the environment. Your dealer is equipped to dispose of used oil without endangering the environment and in compliance with current standards.

### Engine oil


SAE 10W40 / 10W50 synthetic API SN

### Quantity


0.65 l at oil change

The engine must be drained when it is warm to allow the oil to run easier.

- Place the vehicle on its central stand on flat ground.
- Put on protective gloves.
- Remove the cap/oil gauge.
- Remove the drainage cap and its seal (2) and allow the oil to drip into a recipient.

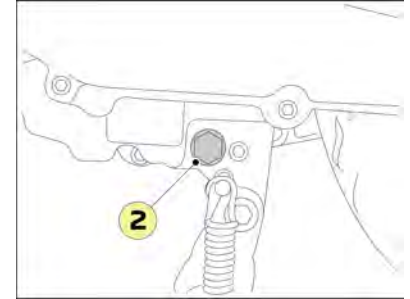

- Remove the strainer cap (3) and clean the strainer (4).

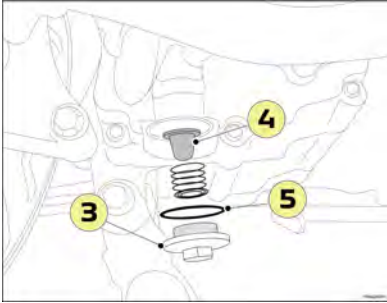

- Fit the drainage cap, fitted with a new seal (5) (Tightening torques: 20 Nm).
- Install the strainer and its cap fitted with a new seal (Tightening torques: 15 Nm).
- Pour the required quantity of oil corresponding to the manufacturer's standards into the filler hole.
- Start the engine and let it run for a short while.
- Remove the filler cap/gauge and check the oil level.
- Add oil if necessary.
- Check that the oil drain plug is sealed.

#### Draining the relay box




We advise you to go to a registered dealer for draining.



Oil contains substances which are harmful to the environment. Your dealer is equipped to dispose of used oil without endangering the environment and in compliance with current standards.


The gearbox must be drained when the engine is warm so that the oil will run easier.

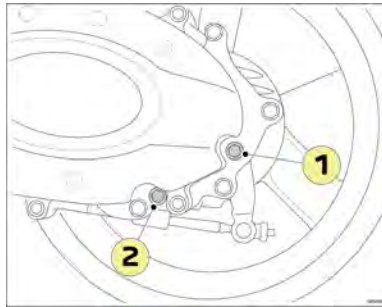

- Place the vehicle on its central stand on flat ground.
- Place a container under the drain port.
- Remove the relay box filler cap (1).
- Remove the drain plug (2).
- Re-install the plug with a new seal (Tightening torques: 10 Nm).
- Pour the required quantity of oil corresponding to the manufacturer's standards into the filler hole.
- Fit the filler cap (Tightening torques: 10 Nm).

Relay box oil
SAE 80W90 API GL4
Quantity
0.12 l at oil change

#### Replacing the air filter

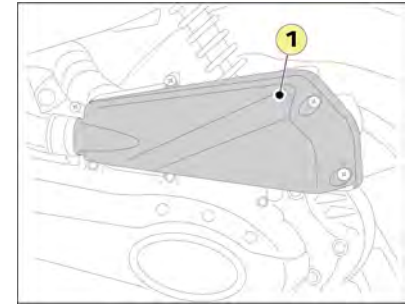


- Remove the air filter cover. (1)
- Remove the air filter.
- Clean inside the air filter box.
- Fit a new air filter.
- Re-fit the cover.

#### Throttle cable play

Throttle play must be between 3 and 5 mm at the handle (A).


If play is not correct, use the setting screw to adjust it (1).

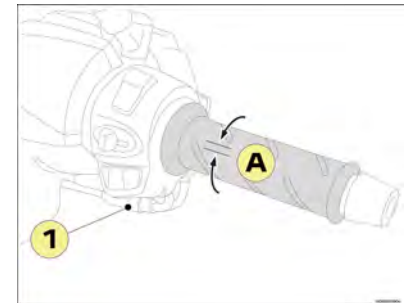

## Tyres

Tyre pressure should be cold-checked regularly. Incorrect pressure causes abnormal wear and affects road behaviour, thus making driving dangerous.

If the wear limit on the tread is reached (A), you are advised to go to a registered dealer to change the tyres.

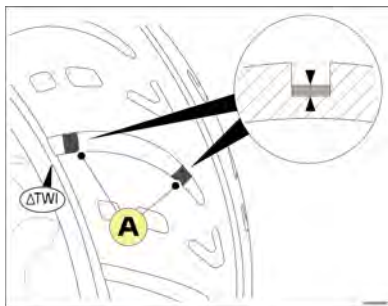

### Tyre pressures

	Front	Rear
Solo	1.8 bars	2.0 bars
Pillion	1.8 bars	2.2 bars



When replacing tyres, you are advised to mount tyres of the same brand and equivalent quality. In case of puncture, it is forbidden to mount an inner tube in a tubeless tyre.




Tyres contain substances that are harmful to the environment. Your dealer is equipped to dispose of used tyres without endangering the environment in compliance with current standards.

## Brake inspection




We advise you to visit a registered dealer for the replacement of these components.

### Front brake pad wear

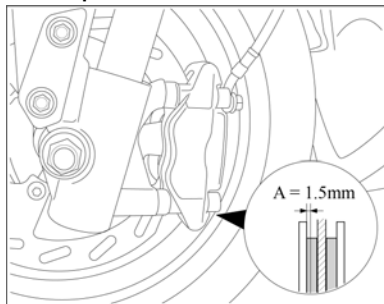

If one of the 2 brake pads is worn down to the minimum dimensions (A), the 2 brake pads must be changed.

## Rear brake lining wear

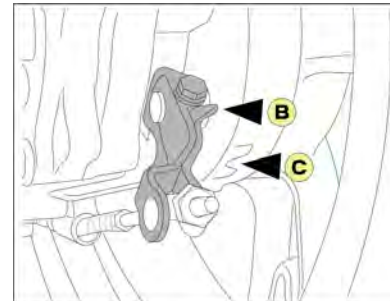


Actuate the brake control lever and check the position of the wear mark on the cam tierod (B) compared to the mark (C) on the engine housing.

If the cam tierod mark is lined up with or passes the wear mark on the engine housing, the brake lining must be replaced.

## Brake fluid



The brake fluid levels must be checked regularly through the braking unit inspection window (A). If the level is close to the minimum mark, we advise you to go to a registered dealer to have the braking system checked and topped up if necessary.

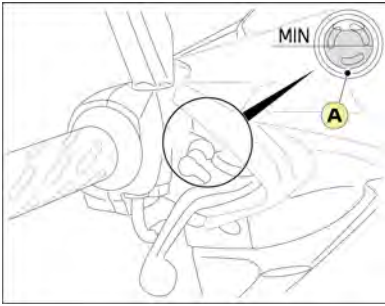

## Battery



Make sure you check that the battery is disconnected before performing any operations on it.

To avoid damage to the electronic circuit, do not charge the battery if it is connected to the vehicle.

To avoid any risk of destruction of an electrical component, you are strongly advised not to use a booster charger to start the vehicle.



The sulphuric acid contained in the battery electrolyte can cause serious burns.

Avoid all contact with the skin, eyes or clothing and always protect your eyes when working near the battery.

In case of leakage, you are advised to consult a registered dealer who is equipped to replace and dispose of batteries without endangering nature and the environment.



A battery produces explosive gases. Keep the battery away from sparks, flames, cigarettes, etc.

It should be charged in a well-ventilated area.

## Extended periods of immobilisation and storage



If the vehicle is not used for an extended period, the battery will slowly discharge naturally or due to its electronics or certain accessories and must thus be regularly charged.

## If the vehicle is not used for a period of 1 month or longer, the battery charge must be preserved:

- Using a maintenance charger (if the vehicle is not used for a long period).
- If not, by disconnecting it from the vehicle (if the vehicle is not used for a period of less than 2 months).



If these recommendations are not followed, the battery may go into deep discharge. In this case the manufacturer's warranty will be void.

## Maintenance-free batteries



A maintenance-free battery must never be opened for topping up.

## Battery charge



The battery must be charged in a well-ventilated area with a suitable charger that can feed a tenth of the battery capacity to avoid premature destruction. You are therefore advised to go to a registered dealer to carry out this operation.




Batteries contain sulphuric acid. Do not allow it to come into contact with skin or eyes. While the battery is charging, it can release explosive gases. Keep sources of sparks, flames and incandescent products away from it.

- Disconnect and remove the battery.
- Charge the battery to 100% beforehand.
- Use a maintenance charger or charge monthly.
- Before restarting, the battery must be charged to 100%.

## Removal of the battery

- Lift the saddle.
- Remove the battery cover.
- Disconnect the battery in the following order:

1. The negative terminal
2. The positive terminal

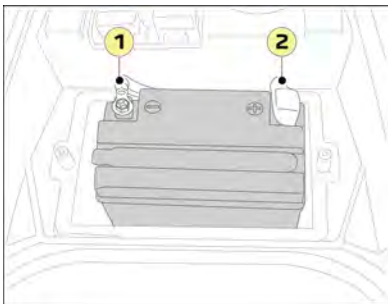

## Installing the battery


Connect the battery in the following order:

1. The positive terminal
2. The negative terminal



## Fuses

Find the faulty fuse by looking at the condition of its filament.

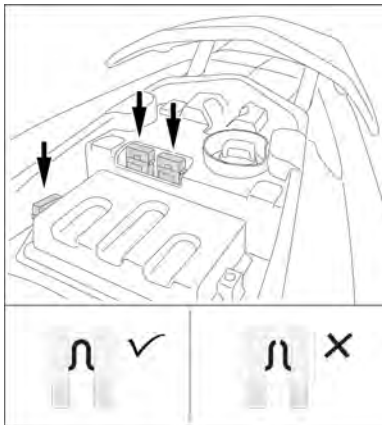

If a fuse often blows this is usually a sign of a short circuit in the electrical circuit. You are advised to have the system checked by a registered dealer. You are advised to switch off the ignition before changing a fuse and always to replace it with a fuse of the same rating. If you do not do so, this may lead to damage in the electrical circuit or even a fire.



Before changing a fuse, you must find the reason for the fault and correct it. Always replace the faulty fuse with a fuse of the same rating.

## Fuse allocation

Main fuse	15 A
Electrical equipment	10 A
+ after the ignition	10 A


## Bulb replacement

### Headlight bulb

- Remove the upper front shield panel (1).



You are advised to contact a registered dealer to have this operation carried out.

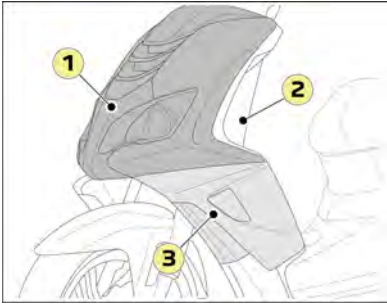

### Headlight bulb


12V - 35W (H8)

### Indicator bulbs (depending on model)

- Remove the upper front shield panel (1).
- Remove the rear shield panel (2).
- Remove the lower front shield panels (3).

### Rear light and indicator bulbs (depending on model)

- Remove all the rear fairings (4).

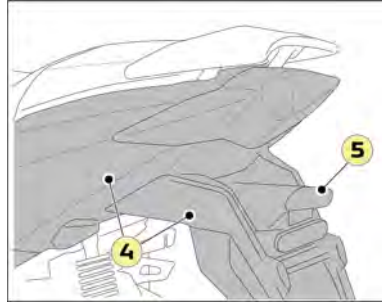


### Number plate light bulb

- Remove the lamp lens (5).

## Headlight adjustment

The headlights are adjusted with one set-screw per lamp, which can be accessed from the rear shield panel.

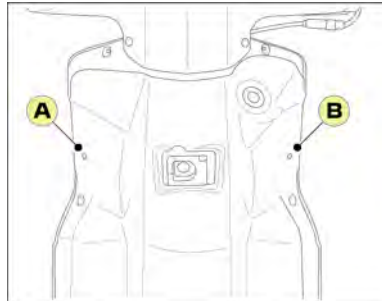

- Screw A for the left light.
- Screw B for the right light.

GB



Peugeot Motocycles recommends



Quality management system certified ISO  
9001 by UTAC



**Peugeot Motocycles SA**  
**Rue du 17 Novembre**  
**F-25350 Mandeure**

Tél. +33(0)3 81 36 80 00

RCS Belfort B 875 550 667

[www.peugeot-motocycles.fr](http://www.peugeot-motocycles.fr)  
[www.peugeot-motocycles.com](http://www.peugeot-motocycles.com)



Dans un souci constant d'amélioration Peugeot Motocycles se réserve le droit de supprimer, modifier ou ajouter toutes références citées.  
DQ/APV du 02/2024 (photos non contractuelles).





# PEUGEOT MOTORCYCLES



**GUIDE D'UTILISATION EN LIGNE**  
ONLINE USER'S GUIDE