



BY  PEUGEOT
MOTORCYCLES



KISBEE
KEEP IT SIMPLE.

M

KISBEE M



NOTICE D'UTILISATION
OWNER'S MANUAL

Owner's manual



TABLE OF CONTENTS

Information..... 1
 Safety advice..... 1
 Characteristics..... 2
 Vehicle identification..... 5
 Products to use..... 5
 Information about the instructions..... 5
 Description of the vehicle..... 7
 Controls..... 8
 Instruments..... 9
 Multi-function display..... 9
 Key-operated ignition switch functions..... 10
 Equipments..... 10
 Checks to perform before use..... 12
 Advice for starting up and driving..... 12
 Warning..... 12
 Eco mode..... 12
 Driving on flooded roads..... 12
 Inspection before setting off..... 13
 Starting the engine..... 13
 Driving..... 13
 Braking..... 14
 Switching off the engine and parking..... 14
 Fuel supply..... 14
 Running in the engine..... 14
 Service operations..... 15
 Maintenance advice..... 15
 Environment / Recyclable..... 15
 Cleaning the vehicle..... 15
 Spark plug inspection or replacement..... 15
 Checking the engine oil level..... 16
 Changing the engine oil..... 16
 Draining the relay box..... 17
 Replacing the air filter..... 17
 Throttle cable play..... 17
 Tyres..... 18

Brake inspection..... 18
 Brake fluid..... 19
 Battery..... 19
 Fuses..... 20
 Fuse allocation..... 20
 Bulb replacement..... 21
 Adjusting the headlight beam..... 21

GB

INFORMATION

You have just bought a Peugeot vehicle.

We would like to thank you for purchasing one of our products.

Please take some time to read this manual carefully before using the vehicle.

This user manual should always be kept in the boot of the vehicle. It contains instructions for use, checks and maintenance of the vehicle, and important safety instructions intended to protect the user and third parties against accidents.

It will give you plenty of advice on how to keep your vehicle in full working order.

Your authorised dealer is familiar with all the vehicle's characteristics and has genuine spare parts and specific tools. He can advise you and service your vehicle in the best conditions according to the established service schedule to ensure that you can enjoy driving it in complete safety.

This manual must be considered as an integral part of the vehicle and must remain with it even if the vehicle is sold on.

PEUGEOT MOTOCYCLES is constantly improving its vehicles. It therefore reserves the right to remove, modify or add any reference mentioned.

SAFETY ADVICE

A inexperienced motorcyclist should make himself completely familiar with his vehicle before going out in traffic. You are strongly advised not to lend your vehicle to an inexperienced rider.

To ride a motorbike, you are required by law to hold a licence or to have completed specific training with a professional, depending on the applicable legislation and based on its category.

Wearing an approved helmet and gloves is obligatory for the user and passenger. You are also advised to wear goggles and light-coloured or reflective clothing adapted to motorcycling.

In some countries, the applicable legislation may not authorise transportation of a passenger, and elsewhere it may oblige motorcycle users to contract a civil liability insurance policy to protect third parties and the passenger against potential damage resulting from an accident.

Driving whilst under the influence of alcohol, drugs or certain medicines is inexcusable and dangerous for yourself and others.

Excessive speed is an important factor in many accidents. You must observe the road signs and signals and adapt your speed to the weather conditions.

The engine and the exhaust system components can reach very high temperatures. When parking your vehicle, be careful to avoid contact with inflammable materials which could cause a fire or with parts of the body which could result in serious burns.

Luggage carriers and panniers approved by PEUGEOT MOTOCYCLES are available as options (depending on the model). The assembly instructions must be complied with and the maximum permissible load (3 to 5 kg depending on the equipment) must not be exceeded.

Fitting accessories such as the driver's apron, top-case, etc. may affect the vehicle's stability (wind factor, load, etc.).

When riding the vehicle fitted with accessories, the driver should reduce speed.

Mounting adaptable parts that have not been approved by PEUGEOT MOTOCYCLES, which alter the technical characteristics or performances of the vehicle is forbidden. Any modification will invalidate the warranty and the vehicle will no longer be in compliance with the version approved by the appropriate services.




CHARACTERISTICS

GB

	KISBEE M	KISBEE M PRO
Official type-approval code	LW4CLA	LW4CLP LW4CLL

Dimensions in mm

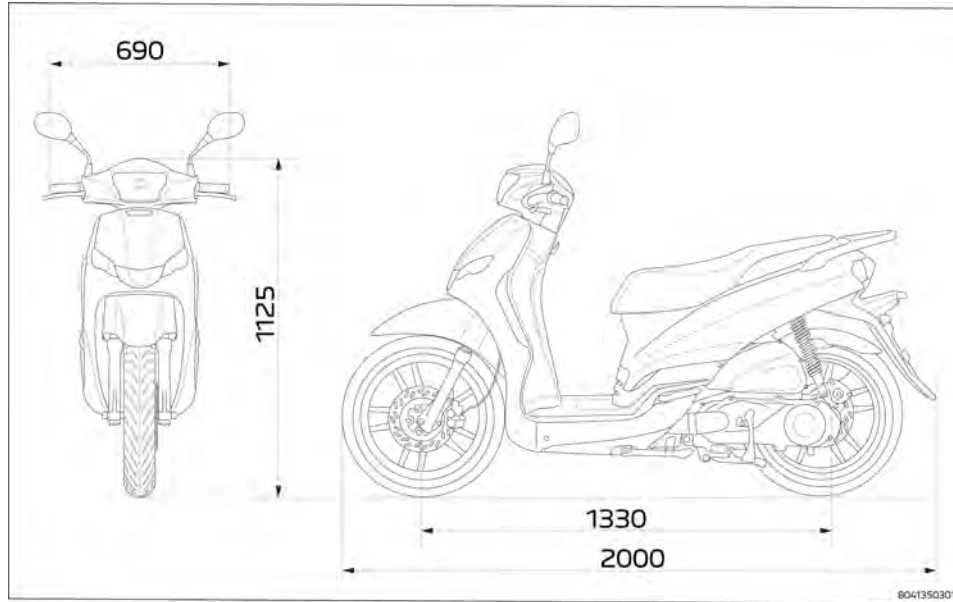

Weight in kg


Unladen weight	114	119 (P) 120 (L)
In working order	120	126 (P) 130 (L)
Authorised maximum. Total weight of the vehicle, the user, the passenger, the accessories and luggage.	270	256 (P) 290 (L)

	KISBEE M	KISBEE M PRO
Official type-approval code	LW4CLA	LW4CLP LW4CLL
Engine		
Identification	XS1P52QMI-4A	
Engine type	4-stroke single-cylinder. 2 valves	
Cubic capacity	125 cc	
Bore x stroke in mm	52.4 x 57.8 mm	
Maximum power	8.4 kW at 8500 rpm	
Maximum torque	10.3 Nm at 6500 rpm	
Cooling	Air cooling	
Fuel supply	Indirect Electronic Injection (EFI)	
Spark plug	NGK CR7HSA	
Lubrication	Pressurised wet sump lubrication	
Exhaust	Catalysed and lambda sensor	
Anti-pollution standard	Euro 5+	
Consumption ^a	2.5 l/100	
CO2 emission (On cycle)	56 g/km	
Capacities in litres		
• Engine oil		
• Total capacity	0.95	
• Periodic oil change	0.7	
• Relay box oil		
• Total capacity	0.18	
• Periodic oil change	0.17	
Fuel tank	5.2	8.1
Fork oil	0.1 l per tube	

^a These consumption values are established according to Regulation 134/2014 Appendix VII. They may vary according to driving behaviour, traffic conditions, weather conditions, the load in the vehicle, vehicle maintenance and use of the accessories etc.

		KISBEE M	KISBEE M PRO
Official type-approval code		LW4CLA	LW4CLP LW4CLL
Tyre dimensions/Standard load index and speed rating			
Front		110/70 - 16 52P or 90/80 - 16 51N	
Minimum load index and speed rating		39J	
Rear		110/70 - 16 52P or 90/80 - 16 51N	
Minimum load index and speed rating		49J	
Pressure in bars			
Front	Solo	1.75	
	Pillion	2.0	
Rear	Solo	2.0	
	Pillion	2.25	
Suspension			
Front		30 mm Ø telescopic front fork Travel: 100 mm	
Rear		2 adjustable shock absorbers Travel: 75 mm	
Brakes			
Front		1 Ø226 mm disk	
Rear		1 Ø226 mm disk	
Electrical equipment			
Headlights		12V - 35/35W (HS1)	
"Side light" bulbs		LED	
Indicator bulbs		12V - 10W	
Rear light		12V - 21/5W	
Number plate light		12V - 5W	
Battery		Maintenance-free batteries 12V - 6Ah YUASA YTX7A-BS	

VEHICLE IDENTIFICATION

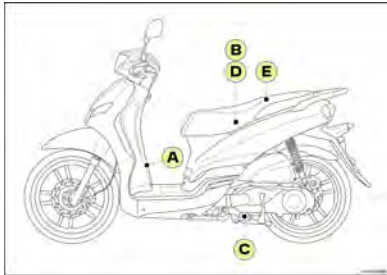

- A. Vehicle identification number (V.I.N).
- B. Manufacturer's plate.
- C. Engine number.
- D. Tyre pressure label.

The label affixed under the saddle gives the cold tyre pressures when riding alone and with a passenger.



Temperature variations modify tyre pressure.

The tyre pressure must be checked once a month when cold.


- E. Fuel identification label.

The label next to the fuel filler cap indicates the type of fuel to use.

Products to use

Fuel

Exclusively: Unleaded E5 or E10

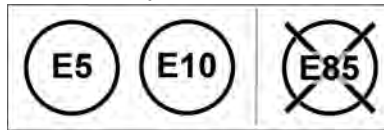


Engine oil

SAE 10W40 / SAE 10W50

100% synthetic

Minimum API SL quality

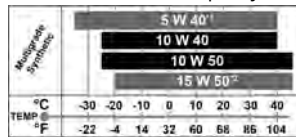

*Recommended if:

¹Minimum annual temperature < -20°C

²Minimum annual temperature > 0°C

Relay box oil

SAE 80W90 API GL4

Fork oil

SAE10W hydraulic oil

Grease

High-temperature grease

Multi-use grease

Brake fluid

Brake fluid DOT 4

INFORMATION ABOUT THE INSTRUCTIONS

Specific information is indicated by the following symbols:



Möbius band

Recyclable.

Means that the product or the package can be recycled.



Explosive

The product may explode upon contact with a naked flame, spark or static electricity, or due to the effect of heat, an impact or friction.

Handle and keep away from heat sources and other causes of sparks.



Flammable

The product may ignite in contact with a naked flame, a spark or static electricity, in contact with the air or in contact with water, releasing inflammable gases.

Handle and keep away from heat sources and other causes of sparks.



Corrosive

The product is corrosive.

It can attack (corrode) or destroy metals.

Contact with the product or splashes of the product may burn the skin and cause lesions to the eyes. Avoid any contact with the eyes and skin. Do not inhale.

GB

MOTUL

KISBE M



Harmful to health
The product can be poisonous in high doses.
It may irritate the skin, eyes and airways.
It may cause skin allergies.
It may cause drowsiness or dizziness. Avoid all contact with the product.



Toxic or fatal
The product can rapidly be fatal. It poisons rapidly, even at low doses. Wear protective equipment. Avoid any contact (oral, skin, inhalation) with the product and wash all exposed areas carefully after use.



Harmful for the environment
The product pollutes.
It has a harmful effect (in the short and/or long term) on organisms in aquatic environments.
Do not dispose of it in the environment.



Do not throw away into a garbage can
One of the product's component is toxic and can be hazardous to environment. Do not throw the used product in the dustbin. Take it back to the trader or to a specific waste disposal site.



People's safety
Operation that can be dangerous for people.
People's safety can be seriously affected if the recommendations are not fully respected.




Important
Operation that can be hazardous to the vehicle.
Indicate the specific procedures that shall be followed in order not to damage the vehicle.



Note
Gives key information concerning operation of the vehicle.

DESCRIPTION OF THE VEHICLE


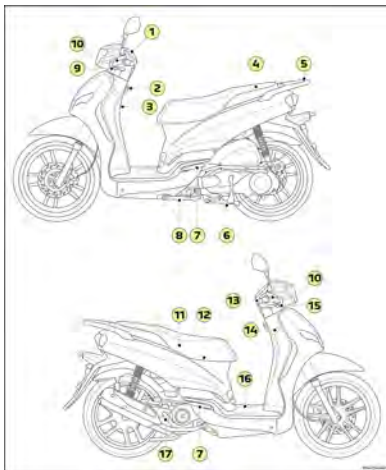


- 15. Right brake lever
- 16. Battery / Fuses
- 17. Oil level gauge

- 1. Instrument panel
- 2. Utility hanger
- 3. Glove box
- 4. Fuel tank
- 5. Grab handle
- 6. Central stand
- 7. Passenger footrests
- 8. Lateral stand
- 9. Left brake lever
- 10. Brake fluid level
- 11. Circuit breaker¹
- 12. Helmet compartment
- 13. Throttle
- 14. Ignition switch

¹ Depending on model

CONTROLS

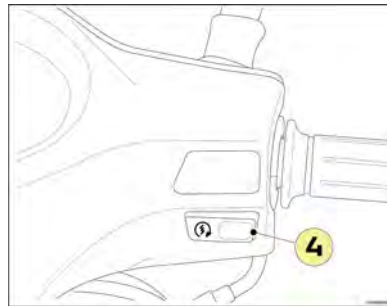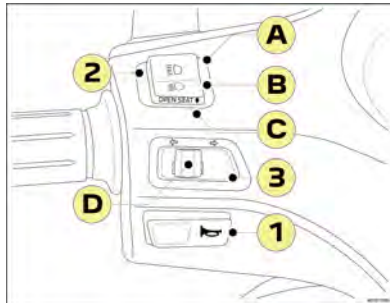

4. Starter switch

1. Horn switch

2. Code button/Headlight

The dipped lights/headlights switch has 3 functions:

- a. High beam
- b. Dip beam
- c. Opening of the saddle

3. Indicators switch

To indicate a change of direction, press the switch:

- Either to the right.
- Or to the left.

To stop the indicators flashing, press the switch (D).

INSTRUMENTS

The instrument panel initializes itself every time the ignition is switched on.



1. Speedometer

Double-scale speedometer showing kilometers and miles.

2. Main beam control

3. Direction indicator warning light

When a flasher bulb has failed the repeater light and the other flasher light flash more quickly to alert the rider of a failure.

4. Emissions control system failure warning light (MIL. Malfunction Indicator Lamp).


If the indicator light turns on when riding, you are advised to have the vehicle checked by an authorised dealer.

5. Multi-function display

(see relevant chapter).

6. Display control knob

Multi-function display

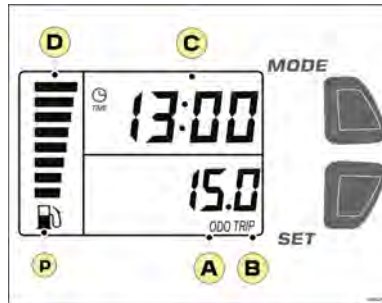

A. Milometer

The tripmeter displays and stores the number of kilometres travelled by the vehicle. The machine total kilometres remains in the memory when the battery is disconnected.

B. Tripmeter (TRIP)

The tripmeter displays and stores the number of kilometres travelled during a given period.

Changing from the total distance display to the daily distance display

- With the ignition on, changeover from the total distance to the daily distance display and inversely is by briefly pressing the control button (MODE).

Resetting the tripmeter

Resetting the tripmeter is done from the TRIP position.

- The daily counter is reset by a short press on the control button with the ignition on (SET).

C. Setting the clock

It is only possible to set the time in the total kilometres position with the machine stationary.

- Turn on the ignition and set the clock.
- Press the control button (several times briefly) until the figures of the clock flash (SET).
- Set the time by successive pushes on the control button (MODE).

A short press on the control button makes the first minutes figure flash (SET).

- Change the minutes by successive pushes on the control button (MODE).

A short press on the control button makes the second minutes figure flash (SET).

- Change the minutes by successive pushes on the control button (MODE).

Pressing the control button allows you to validate the value (SET).

D. Fuel gauge/Fuel reserve gauge


When the tank is full:

- All of the fuel level indicator segments are lit.
- When the tank is empty, the last segment on the fuel level indicator and the pump symbol flash (p).



KEY-OPERATED IGNITION SWITCH FUNCTIONS

GB

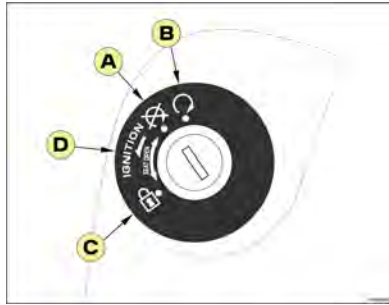

A. Engine off position

The engine is off. Power to the electrical circuit is off. The key can be removed.

B. On position

Power to the electrical circuit is on. The engine can be started. The key cannot be removed.

C. Steering unlocked

Power to the electrical circuit is off. The handlebars must be turned to the left, while the key must be simultaneously pushed in and turned to the left. The key can be removed.

D. Opening the rear storage compartment

Turning the key to this position unlocks the saddle.

EQUIPMENTS

Circuit breaker (depending on the model)




A switch neutralising the ignition circuit is located in the compartment under the saddle.

Position LOCK. The engine shall not start.

Position UNLOCK. The engine can be started.

Adjustment of damper settings

Each damper has an adjuster ring that can be used to stiffen or soften the suspension, depending on the vehicle load.

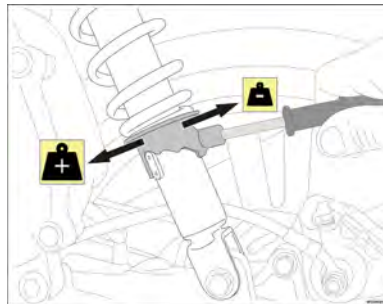

Use the on-board tool to make this adjustment.



To guarantee your comfort and safety, always adjust the damper preload in line with the vehicle load. Perform the same setting for the 2 dampers.

Utility hanger

The utility hanger is located on the rear shield panel. It can be used to attach a maximum load of 2.5 kg.

Luggage carrier

The rear luggage carrier can bear a maximum load of 7 kg.



To not place luggage on it that is too bulky and may impair the lighting and steering.

Do not exceed the maximum recommended load for each luggage carrier.

Attach luggage firmly to the vehicle, even over a short distance.

Business vehicle:

The rear luggage carrier can bear a maximum load of 35 kg.

Lateral stand

The central stand is fitted with a circuit breaker which prevents the motor from being started if the stand is unfolded.

This system reminds the driver to lift the stand before starting the engine.

If the engine starts with the kickstand down, it is essential to have the circuit checked by an approved dealer.

Storage compartment

- Insert the key into the ignition switch, then turn it anti-clockwise to the SEAT OPEN position to unlock the seat.
- Lift the seat to access the compartment.



You are advised not to leave any objects in the storage compartments, whatever the value (helmet, document-holder, etc.), the manufacturer may not be held liable in the event of theft or intrusion.



Do not exceed the maximum load for the compartment, which is 5 kg.

The seat compartment heats up as the engine heats up. Do not store food, flammable products or any products likely to be damaged by heat in the compartment.

As water can get into the compartment during washing or periods of heavy rain, you are advised to wrap in a bag any items to be stored in the compartment.

Do not store items that are too bulky in the compartment, as you risk damaging the items or the seat and its hinge.

CHECKS TO PERFORM BEFORE USE

The user must personally ensure that his vehicle is in good condition. Certain safety elements may show signs of damage even when the vehicle is not used. e.g. prolonged exposure to bad weather can lead to oxidation in the braking system or a pressure drop in the tyres which can have serious consequences. In addition to a simple visual inspection, it is extremely important to check the following points before use.



These checks only take a few minutes and help to keep your vehicle in good condition, for optimum use combining reliability and safety.

If one of the elements in the checklist does not work properly, ask your registered dealer to check it and have it repaired if necessary before using the vehicle.

ADVICE FOR STARTING UP AND DRIVING

Warning

Before using the vehicle for the first time, make sure you are familiar with all the controls and their respective uses. If you are not sure about the functions of any of the controls, your registered dealer can answer your questions and give you any help you may require.



As exhaust fumes are toxic, the engine must be started in a well-ventilated area. It must never be allowed to run in a closed space, even for a short time.

Eco mode

Adopt smooth driving behaviour


- Turn the acceleration handle gradually, not suddenly.
- Anticipate braking using the engine brake.
- Limit the vehicle load as well as aerodynamic resistance.
- Regularly check the inflation pressure in your tyres, and refer to the label under the seat.
- Avoid heating up the engine while stationary: the engine heats quicker when you drive.
- Have your vehicle serviced according to the manufacturer's maintenance plan.

These attitudes contribute to economising fuel consumption, reducing CO2 emissions and alleviating the background sound of traffic.

Driving on flooded roads



You are strongly advised not to drive on flooded roads as this may seriously damage the engine, transmission and electrical systems on your vehicle.

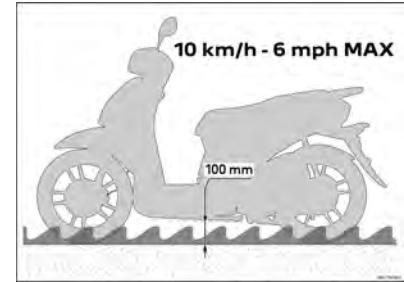

If you cannot avoid driving through flood water:

- Check that the water depth does not exceed 100 mm, taking into account waves which could be generated by other road users.
- Under no circumstances exceed a speed of 10 km/h.
- Once out of the flooded area, brake gently several times to dry out the brakes as soon as the safety conditions allow it.

Inspection before setting off

Component	Checks
Fuel	<ul style="list-style-type: none"> • Check the fuel level in the tank. • Top up with fuel if necessary. • Check that there is no fuel leak.
Engine oil	<ul style="list-style-type: none"> • Check the level of the engine oil. • If necessary, top up with the recommended oil.
Disk brakes	<ul style="list-style-type: none"> • Check brake operation. • Have an approved dealer check them if they feel soft. • Check brake pad wear. • Check the level of brake fluid in the reservoir.
Lighting, signalling, indicators, horn	<ul style="list-style-type: none"> • Check operation. • Correct if necessary.
Wheels and tyres	<ul style="list-style-type: none"> • Check the tyre wear and condition. • Check the tyre pressures cold. • Correct if necessary.
Throttle	<ul style="list-style-type: none"> • Check the throttle handle turns smoothly and returns correctly to its starting position.
Steering	<ul style="list-style-type: none"> • Check the free rotation of the steering.
Stand	<ul style="list-style-type: none"> • Check that the central and side stands can be unfolded smoothly. • Operation of the ignition cut-out.

Starting the engine

For greater safety, place the vehicle on its central stand before starting the engine.



Ensure that the switch under the saddle is in position UNLOCK.¹

- Turn the ignition key to "ON".
- Ensure that the throttle is in the OFF position.
- Press one of the brake levers while pressing the starter button. Do not press the starter for more than 10 seconds.
- Release the starter button as soon as the engine starts.



If the engine does not start, release the starter button and the brake lever, wait a few seconds and try again.


Driving

Starting off

The vehicle is on its stand with the engine running.

- Squeeze the brake lever with your left hand, grip the grab handle with your right hand and push the vehicle forwards to fold up the central stand.
- Sit on the vehicle.
- Release the left brake and turn the throttle slowly with your right hand to start moving.

Accelerating and decelerating

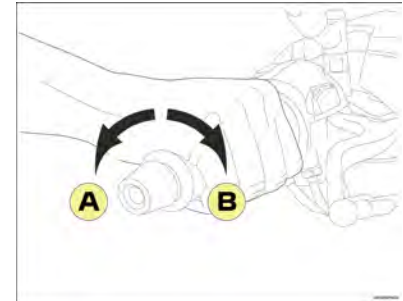

To accelerate, turn the throttle towards (A). To slow down, turn the throttle towards (B).

GB

¹ Depending on model

Braking

SBC Braking system

This is an integrated braking system.

- This system makes the vehicle easier to use: the right hand operates the throttle and the left hand controls the brake. When braking with the left hand, the system acts simultaneously on the front and rear brake.
- The right brake is a secondary service brake which only acts on the front brake and supplements the combined system on the left lever in case of emergency.

Use of the brakes

- Close the throttle.
- Activate the brake system by gradually increasing the pressure.



Avoid braking suddenly on wet roads or in bends.

Reduce speed on steep slopes to avoid prolonged braking, as overheating will reduce braking efficiency.

Switching off the engine and parking

The engine is switched off when at idling speed by turning the ignition key to "OFF".

The vehicle should be parked on flat ground.

- Either on the middle stand.
- Or on the lateral stand.

Each time the vehicle is parked, the steering should be locked and the ignition key removed. The ignition circuit can be neutralised by setting the switch under the saddle to LOCK.

Fuel supply



The engine must be switched off in order to fill the fuel tank in complete safety.


A label affixed near the fuel cap reminds you of the type of fuel to use.



Any fuel containing up to 10% ethanol can be used (E5, E10).

An ethanol content of more than 10% by volume is not permitted. E85 must not be used.

The fuel tank is located under the saddle.

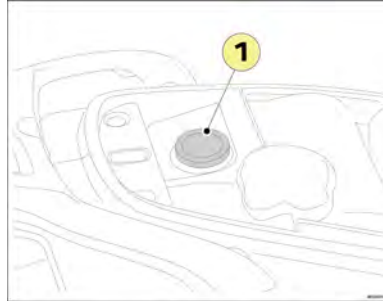

1. Fuel tank cap.

- Insert the petrol pump nozzle into the filling orifice. Make sure the nozzle is correctly inserted into the filling pipe.
- Do not overfill the tank.

Stop filling when the nozzle stops for the first time.



Do not fill the fuel tank to excess: The fuel may expand due to the engine heat or heat from the sun and overflow.



Any overflows must be wiped up immediately. The fuel could actually damage painted surfaces or plastic parts.

Running in the engine

Running in the engine is essential to guarantee its performance and lifetime.

During the running-in period, you are advised not to overload the engine and to avoid exceeding a higher than normal operating temperature.

From 0 to 500 km

Do not hold the throttle handle open at more than half its distance of travel over a long trip.

From 500 to 1000 km

Do not hold the throttle handle open at more than 3/4 its distance of travel over a long trip.

Once this mileage has been done, the vehicle can be used normally.

SERVICE OPERATIONS

Maintenance advice

Ensure that the servicing schedule for your vehicle is strictly followed to maintain your contractual warranty rights.

A table of inspections for the maintenance schedule is inserted into the maintenance booklet. The registered dealer must add his stamp, the date of servicing and the number of kilometres the vehicle has covered.

In order to maintain maximum safety and reliability of your vehicle, you are advised to have maintenance and repairs carried out by a registered dealer who has the necessary technical training, specific tools and spare parts.

Environment / Recyclable

Worn parts replaced during routine maintenance (mechanical parts, battery, etc.) must be disposed of with specialised bodies.

At the end of its life, the vehicle must be taken to an authorised centre for recycling.

In all cases, comply with the local laws.



Batteries contain harmful substances. They must be disposed of according to the legal requirements and must under no circumstances be thrown away in the household waste.

Cleaning the vehicle



The bodywork is made of plastic parts that can be painted or are shiny. Do not use solvents or cleaning products that are too corrosive.



Do not use high pressure cleaners which may cause water to infiltrate the following parts: seals, bearings and hinges, electrical components such as connectors, contactors and lighting.

Wash the bodywork with soapy water and rinse with generous amounts of clear water.

The vehicle can be dried with a chamois leather. After washing the vehicle, brake several times at low speed to dry out the brakes.



The vehicle should be washed in a place equipped for wastewater collection.

Certain silicon-based products can alter the quality of the paintwork. In case of need or doubt, a registered dealer can advise you on using cleaning products or restoring scratched bodywork.


Spark plug inspection or replacement



It is essential to use a resistive spark suppressor and a resistive spark plug in accordance with the manufacturer's recommendations.

The engine must be cold.

- Remove the spark plug access hatch.
- Remove the saddle storage compartment.
- Disconnect the suppressor.
- Remove the spark plug.
- Measure the distance between the electrodes and correct it if necessary (A).

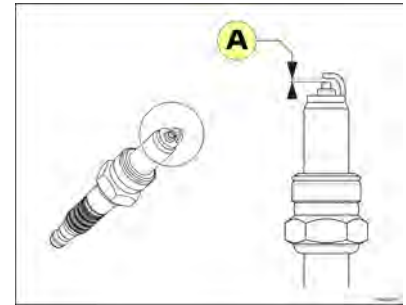


Spark plug

NGK CR7HSA

Electrode gap

0.7 to 0.8 mm

- Fit and screw in the spark plug manually.
 - Tighten the spark plug with a spanner.
 - 1/8 - 1/4 turn for a reused spark plug.
 - 1/2 turn for a new spark plug.
-  Ensure the suppressor is correctly clipped onto the spark plug. Have the torque quickly checked by a registered dealer.

Checking the engine oil level




Check the oil level every 1000km / 600Mi or before a long journey.


GB

To correctly measure the oil level, place the vehicle on the centre stand on flat ground.

- Start the engine, let it run for a few minutes and then stop it.
- After switching off the engine, wait for 5 minutes to allow the engine oil time to return to the oil sump.
- Remove the oil filler cap/gauge (1).

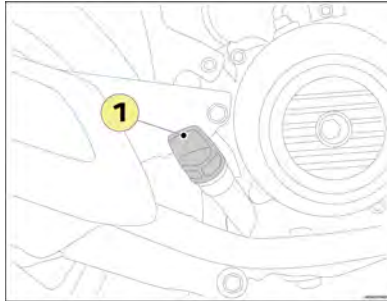

- Wipe the filler cap/gauge using a clean cloth and reinsert it into the filler hole without screwing it up.
- Remove the filler cap/gauge and check the oil level.
- The oil level shall be between the minimum (A) and maximum (B) level marks without exceeding the latter.

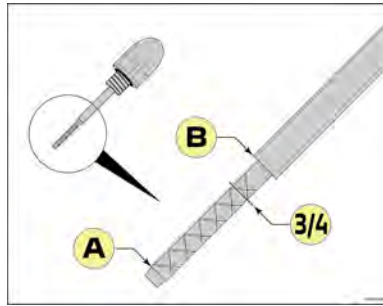

- If the oil level is close to the minimum mark or lower, you are advised to immediately top up the level to 3/4 in small amounts using the oil recommended by the manufacturer.



Too much oil will noticeably restrict the vehicle's performance.

Changing the engine oil



We advise you to go to a registered dealer for draining.



Oil contains substances which are harmful to the environment. Your dealer is equipped to dispose of used oil without endangering the environment and in compliance with current standards.

Engine oil

0.7 l at oil change

SAE 10W40 / SAE 10W50
100% synthetic
Minimum API SL quality


Temperature Symbol	Oil Viscosity Grades										
	5 W 40 ¹	10 W 40	10 W 50	15 W 50 ²							
TEMP °C	-30	-20	-10	0	10	20	30	40			
TEMP °F	-22	-4	14	32	60	68	86	104			

*Recommended if:


¹Minimum annual temperature < -20°C

²Minimum annual temperature > 0°C

The engine must be drained when it is warm to allow the oil to run easier.

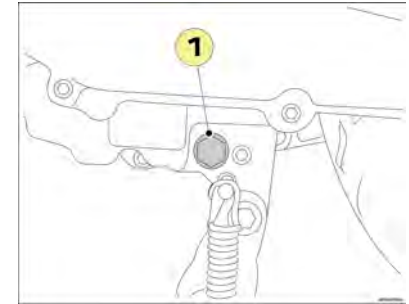

- Place the vehicle on its central stand on flat ground.
- Put on protective gloves.
- Remove the drainage cap and its seal (1) and allow the oil to drip into a recipient.

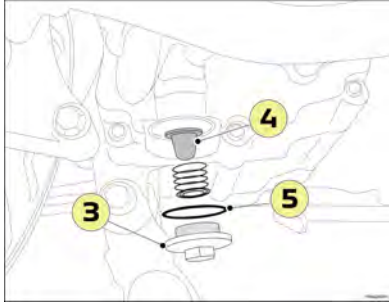

- Remove the strainer cap (3) and clean the strainer (4).
- Put back the drainage cap and strainer cap, fitted with a new seal (5).
- Pour the required quantity of oil corresponding to the manufacturer's standards into the filler hole.
- Start the engine and let it run for a short while.
- Add oil if necessary.
- Check that the oil drain plug is sealed.

Draining the relay box




We advise you to go to a registered dealer for draining.



Oil contains substances which are harmful to the environment. Your dealer is equipped to dispose of used oil without endangering the environment and in compliance with current standards.


The gearbox must be drained when the engine is warm so that the oil will run easier.

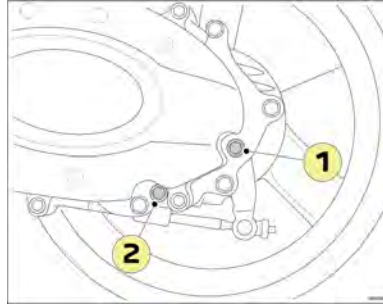

- Place the vehicle on its central stand on flat ground.
- Place a container under the drain port.
- Remove the relay box filler cap (1).
- Remove the drain plug (2).
- Re-install the plug with a new seal.
- Pour the required quantity of oil corresponding to the manufacturer's standards into the filler hole.
- Fit the filler cap.

Relay box	
SAE 80W90 API GL4	
Quantity	
0.17 l	at oil change

Replacing the air filter

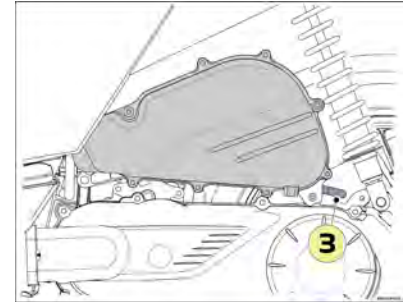


- Remove the air filter cover.
- Remove the air filter.
- Clean inside the air filter box.
- Fit a new air filter.
- Re-fit the cover.
- Remove the oil vapour return drain plug to let humidity and oil drip out (3).

Throttle cable play

The play in the throttle control must be 3 to 5 mm on the handle (A).

If the play is incorrect, use the setting nut to adjust it (1).

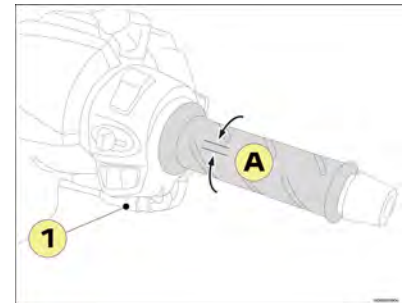

Tyres

Tyre pressure


The tyre pressure must be checked once a month when cold.

Incorrect pressure causes abnormal wear and affects road behaviour, thus making driving dangerous.

Tyre pressures

Front	Solo	1.75
	Pillion	2.0
Rear	Solo	2.0
	Pillion	2.25

If the wear limit on the tread is reached (A), you are advised to go to a registered dealer to change the tyres.

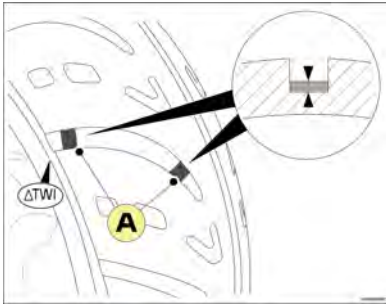

When replacing tyres, you are advised to mount tyres of the same brand and equivalent quality. In case of puncture, it is forbidden to mount an inner tube in a tubeless tyre.



Tyres contain substances that are harmful to the environment. Your dealer is equipped to dispose of used tyres without endangering the environment in compliance with current standards.

Brake inspection




We advise you to visit a registered dealer for the replacement of these components.

Each brake pad is equipped with wear indicators. The indicators enable you to check the wear on the pads without having to disassemble the brake.


- Check the wear on the pads by verifying the position of the wear indicators while depressing the brake. If a brake pad is worn to the point that the indicator touches the brake disk, have the pair of brake pads replaced by an approved distributor.

Front brake pads

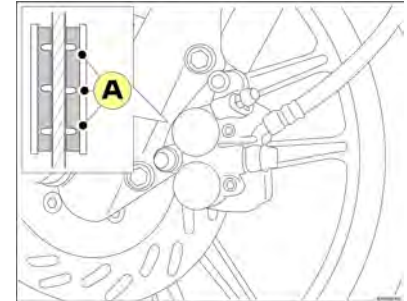

- A. Brake pad wear indicators .

Rear brake pads

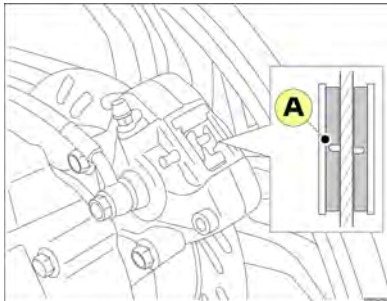


A. Brake pad wear indicators .

Brake fluid



The brake fluid levels must be checked regularly through the braking unit inspection window (A).

If the level is close to the minimum mark, you are advised to take the vehicle to an approved dealer to have the brake system checked, or topped up as needed.

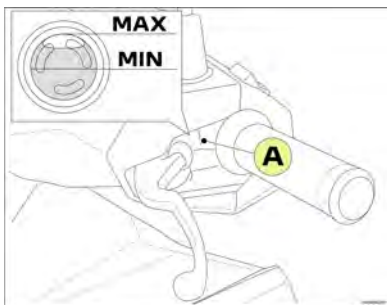

Battery



Make sure you check that the battery is disconnected before performing any operations on it.

Battery power leads must never be disconnected while the engine is running.

To avoid damage to the electronic circuit, do not charge the battery if it is connected to the vehicle.



The sulphuric acid contained in the battery electrolyte can cause serious burns.

Avoid all contact with the skin, eyes or clothing and always protect your eyes when working near the battery.

In case of leakage, you are advised to consult a registered dealer who is equipped to replace and dispose of batteries without endangering nature and the environment.



A battery produces explosive gases. Keep the battery away from sparks, flames, cigarettes, etc.. .

It should be charged in a well-ventilated area.

Extended periods of immobilisation and storage



If the vehicle is not used for an extended period, the battery will slowly discharge naturally or due to its electronics or certain accessories and must thus be regularly charged.

If the vehicle is not used for a period of 1 month or longer, the battery charge must be preserved:

- Using a maintenance charger (if the vehicle is not used for a long period).
- If not, by disconnecting it from the vehicle (if the vehicle is not used for a period of less than 2 months).



If these recommendations are not followed, the battery may go into deep discharge. In this case the manufacturer's warranty will be void.

Battery charge



A battery produces explosive gases. Keep the battery away from sparks, flames, cigarettes, etc.. .

It should be charged in a well-ventilated area.



The battery must be charged in a well-ventilated area with a suitable charger that can feed a tenth of the battery capacity to avoid premature destruction. You are therefore advised to go to a registered dealer to carry out this operation.




To avoid any risk of destruction of an electrical component, you are strongly advised not to use a booster charger to start the vehicle.

- Disconnect and remove the battery.
- Charge the battery to 100% beforehand.
- Use a maintenance charger or charge monthly.
- Before restarting, the battery must be charged to 100%.

Removal of the battery

- Remove the battery cover.
- Disconnect the battery in the following order:


1. The negative terminal.
2. The positive terminal.

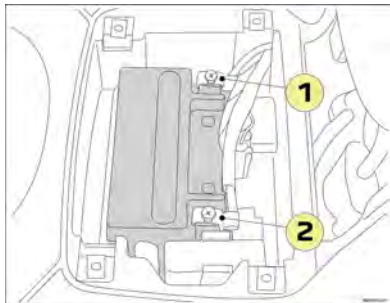

Installing the battery


• Connect the battery in the following order:

1. The positive terminal.
2. The negative terminal.

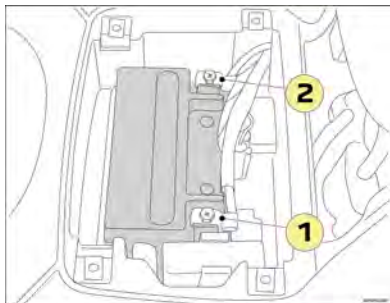

Fuses

- The fuses are accessed by removing the saddle storage compartment (fuses from F1 to F3).
- Find the faulty fuse by looking at the condition of its filament.

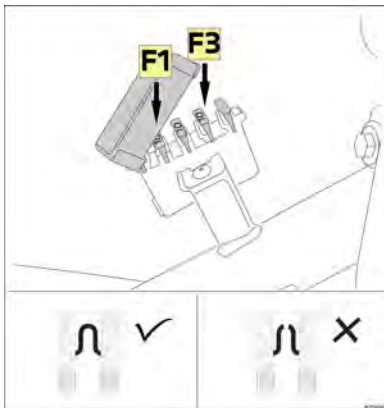

Fuse allocation

F1 20A	Main fuse
F2 15A	Injection system
F3 10A	+ after the ignition
F4	Free



If a fuse often blows this is usually a sign of a short circuit in the electrical circuit. You are advised to have the system checked by a registered dealer.

Before changing a fuse, you must find the reason for the fault and correct it.

Always replace the faulty fuse with a fuse of the same rating.



You are advised to switch off the ignition before changing a fuse and always to replace it with a fuse of the same rating. If you do not do so, this may lead to damage in the electrical circuit or even a fire.


BULB REPLACEMENT

Headlight bulb

- Remove the rearview mirrors.
- Remove the headlight fairing (1).



You are advised to contact a registered dealer to have this operation carried out.

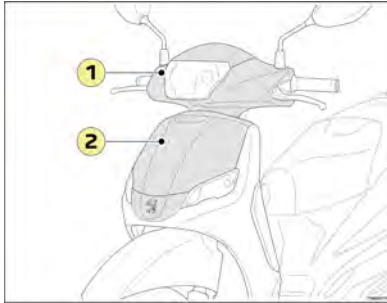

Indicator bulbs


- Remove the front upper shield panel (2).



You are advised to contact a registered dealer to have this operation carried out.

Rear light and indicator bulbs

- Remove the lamp lens (3).

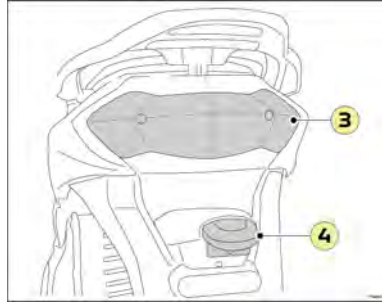


Number plate light bulb

- Remove the lamp lens (4).

Adjusting the headlight beam

- The headlight is adjusted using a screw located under the headlight.

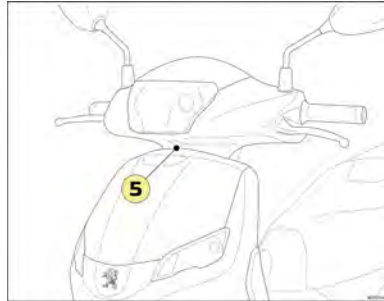

- Loosen the attachment screw (5).
- Adjust the direction of the headlamp by hand.
- Tighten the fastening screw.



So as not to disturb other road users, the headlight must be set by height, depending on the vehicle load.

GB

Peugeot Motocycles recommends



Quality management system certified ISO
9001 by UTAC



Peugeot Motocycles SA
Rue du 17 Novembre
F-25350 Mandeure

Tél. +33(0)3 81 36 80 00

RCS Belfort B 875 550 667

www.peugeot-motocycles.fr
www.peugeot-motocycles.com



Dans un souci constant d'amélioration Peugeot Motocycles se réserve le droit de supprimer, modifier ou ajouter toutes références citées.
DQ/APV du 02/2024 (photos non contractuelles).



KISBEE
KEEP IT SIMPLE.

KISBEE



GUIDE D'UTILISATION EN LIGNE
ONLINE USER'S GUIDE