

TAKE A RIDE  
ON THE FRENCH SIDE

NOTICE D'UTILISATION  
OWNER'S MANUAL



*Djangoo*

BY  PEUGEOT  
MOTORCYCLES





Welcome





## TABLE OF CONTENTS

Information.....	1
Safety advice.....	1
Characteristics.....	2
Vehicle identification.....	6
Products to use.....	6
Information about the instructions.....	7
Description of the vehicle.....	8
Controls: Django Active.....	9
Controls: Django Legacy / Sport.....	10
Instruments: Django Active.....	11
Digital display.....	11
Scrolling order of the counters.....	13
Setting the digital display.....	13
Pairing a Bluetooth ® phone using the PEUGEOT MOTOCYCLES app (depending on availability).....	13
Indicator lights and warning lights.....	14
Instruments: Django Legacy / Sport.....	15
Digital display.....	15
Scrolling order of the counters.....	16
Indicator lights and warning lights.....	16
Description of the indicators.....	17
"PERSONALISATION - CONNECTION - SETTINGS" menu.....	18
Pairing a phone with Bluetooth.....	18
Pairing a Bluetooth ® phone using the PEUGEOT MOTOCYCLES app (depending on availability).....	18
The functions which can be accessed via the configuration menu are described in detail in the table below. ....	19
Key-operated ignition switch functions (DJANGO ACTIVE).....	21
smart key key, rotating knob and openings (DJANGO Legacy / Sport).....	21
Smart Key key.....	21

Electrical disturbances.....	21
Rotating knob.....	21
No Smart key recognition.....	22
Replacing or adding a smart key.....	22
Openings.....	23
Equipments.....	24
Accessory socket (USB).....	24
Utility hanger.....	24
Lateral stand.....	24
Accessory.....	24
Checks to perform before use.....	25
Advice for starting up and driving.....	25
Warning.....	25
Eco mode.....	25
Driving on flooded roads.....	25
Inspection before setting off.....	26
Starting the engine.....	26
Driving.....	26
Braking.....	26
Switching off the engine and parking.....	27
Fuel supply.....	27
Running in the engine.....	27
Service operations.....	28
Maintenance advice.....	28
Environment / Recycling.....	28
Cleaning the vehicle.....	28
Spark plug inspection or replacement.....	28
Checking the engine oil level.....	29
Changing the engine oil.....	29
Draining the relay box.....	30
Replacing the air filter.....	30
Coolant.....	31
Throttle cable play.....	31
Tyres.....	31
Brake inspection.....	31

Brake fluid.....	32
Battery.....	32
Fuses.....	33
Adjusting the headlight beam.....	34



**GB**

## INFORMATION

You have just bought a Peugeot vehicle.

We would like to thank you for purchasing one of our products.

Please take some time to read this manual carefully before using the vehicle.

This user manual should always be kept in the boot of the vehicle. It contains instructions for use, checks and maintenance of the vehicle, and important safety instructions intended to protect the user and third parties against accidents.

It will give you plenty of advice on how to keep your vehicle in full working order.

Your vehicle is built to last but this does not mean that it does not require a minimum amount of maintenance.

Your authorised dealer is familiar with all the vehicle's characteristics and has genuine spare parts and specific tools. He can advise you and service your vehicle in the best conditions according to the established service schedule to ensure that you can enjoy driving it in complete safety.

This manual must be considered as an integral part of the vehicle and must remain with it even if the vehicle is sold on.

In our permanent concern to make improvements PEUGEOT MOTOCYCLES reserves the right to suppress, modify, or add any reference mentioned. Reproductions or translations, even partial, of this document, are not permitted without the written authorization of PEUGEOT MOTOCYCLES.

## SAFETY ADVICE

A inexperienced motorcyclist should make himself completely familiar with his vehicle before going out in traffic. You are strongly advised not to lend your vehicle to an inexperienced rider.

To ride a motorbike, you are required by law to hold a licence or to have completed specific training with a professional, depending on the applicable legislation and based on its category.

Wearing an approved helmet and gloves is obligatory for the user and passenger. You are also advised to wear goggles and light-coloured or reflective clothing adapted to motorcycling.

In some countries, the applicable legislation may not authorise transportation of a passenger, and elsewhere it may oblige motorcycle users to contract a civil liability insurance policy to protect third parties and the passenger against potential damage resulting from an accident.

Driving whilst under the influence of alcohol, drugs or certain medicines is inexcusable and dangerous for yourself and others.

Excessive speed is an important factor in many accidents. You must observe the road signs and signals and adapt your speed to the weather conditions.

The engine and the exhaust system components can reach very high temperatures. When parking your vehicle, be careful to avoid contact with inflammable materials which could cause a fire or with parts of the body which could result in serious burns.

Luggage carriers and panniers approved by PEUGEOT MOTOCYCLES are available as options (depending on the model). The assembly instructions must be complied with and the maximum permissible load (3 to 5 kg depending on the equipment) must not be exceeded.

Fitting accessories such as the driver's apron, top-case, etc. may affect the vehicle's stability (wind factor, load, etc.).

When riding the vehicle fitted with accessories, the driver should reduce speed.

Parking in the sun: The reflection of the sun's rays on the windshield can, at certain times of the day, create a high temperature on the dashboard. This can lead to warping. To prevent this, do not park the vehicle in the sun.

Mounting adaptable parts that have not been approved by PEUGEOT MOTOCYCLES, which alter the technical characteristics or performances of the vehicle is forbidden. Any modification will invalidate the warranty and the vehicle will no longer be in compliance with the version approved by the appropriate services.

The presence of mist on the inside of the headlight glass is normal. It disappears a few minutes after the lights are switched on.


GB

## CHARACTERISTICS

**GB**

	DJANGO 125 ACTIVE	DJANGO 125 LEGACY / SPORT
Official type-approval code	M4ABAB	M4ABAB

**Dimensions in mm**

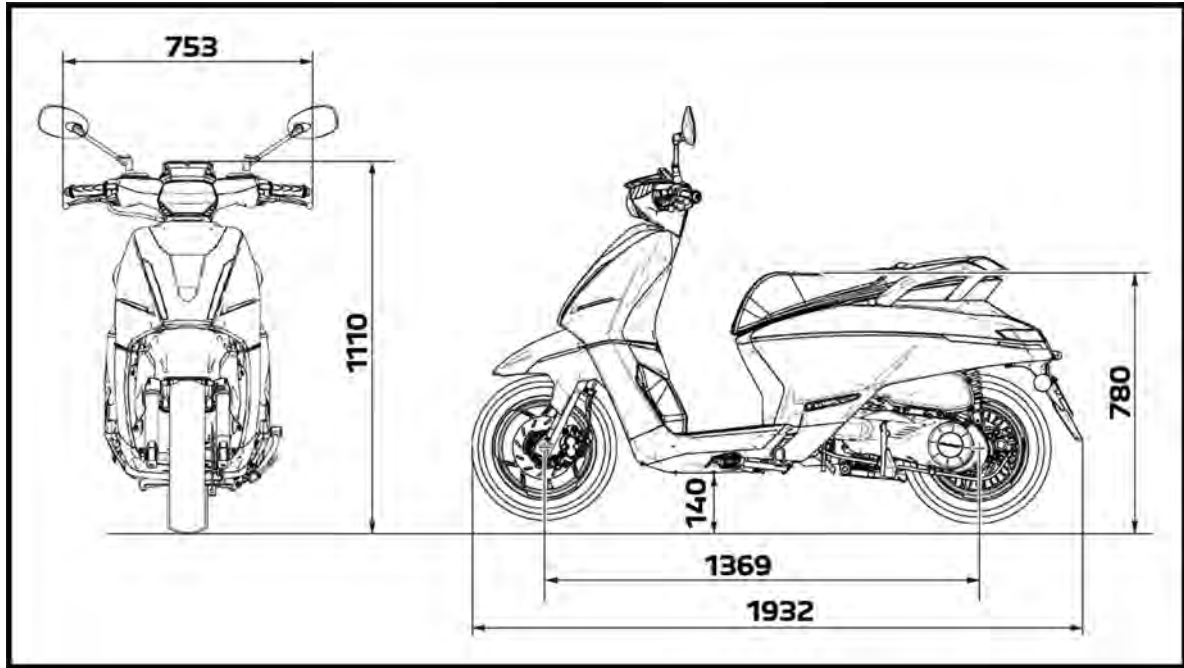

<b>Weight in kg</b>	
Unladen weight	138
In working order	144
Authorised maximum. Total weight of the vehicle, the user, the passenger, the accessories and luggage.	330

	DJANGO 125 ACTIVE	DJANGO 125 LEGACY / SPORT
Official type-approval code	M4ABAB	M4ABAB
<b>Engine</b>		
Identification	P1P52MI-5A	
Engine type	4-stroke single-cylinder. 4 valves.	
Cubic capacity	125 cc	
Bore x stroke in mm	52.4 x 57.8 mm	
Maximum power	9.3 kW at 8500 rpm	
Maximum torque	11.1 Nm at 6500 rpm	
Cooling	Fluid cooling system	
Fuel supply	Indirect Electronic Injection (EFI)	
Spark plug	NGK CPR9EB-9	
Lubrication	Pressurised wet sump lubrication	
Exhaust	Catalysed and lambda sensor	
Anti-pollution standard	Euro 5+	
Consumption <sup>a</sup>	2.5 l/100	
CO <sup>2</sup> emission (On cycle)	58 g/km	
<b>Capacities in litres</b>		
Engine oil		
• Total capacity	1	
• Periodic oil change	0.8	
Relay box oil		
• Total capacity	0.18	
• Periodic oil change	0.17	
Fuel tank	7.9	
Fork oil	0.096 / per tube	


<sup>a</sup> These consumption values are established according to Regulation 134/2014 Appendix VII. They may vary according to driving behaviour, traffic conditions, weather conditions, the load in the vehicle, vehicle maintenance and use of the accessories etc.

	DJANGO 125 ACTIVE	DJANGO 125 LEGACY / SPORT
Official type-approval code	M4ABAB	M4ABAB
<b>Tyre dimensions / Standard load index and speed rating</b>		
Front	110/70 - 12 (47P)	
Minimum load index and speed rating	38J	
Rear	120/70 - 12 (58L)	
Minimum load index and speed rating	56J	
<b>Pressure in bars</b>		
Front		
Solo	1.8	
Pillion	1.8	
Rear		
Solo	2.0	
Pillion	2.2	
<b>Suspension</b>		
Front	Inverted telescopic fork Ø32 mm Travel: 85 mm	
Rear	Combined spring and hydraulically-damped shock absorber Travel: 80 mm	
<b>Brakes</b>		
Braking system	1 channel ABS	
Front	1 Ø200 mm disk	
Rear	1 Ø190 mm disk	

	DJANGO 125 ACTIVE	DJANGO 125 LEGACY / SPORT
Official type-approval code	M4ABAB	M4ABAB
<b>Electrical equipment</b>		
Headlights		LED
"Side light" bulbs		LED
Intermittent signal		LED
Rear light		LED
Number plate light		LED
Battery	12V - 11.8 Ah Maintenance-free batteries YUASA BTZ14S-BS	

**GB**

**VEHICLE IDENTIFICATION**

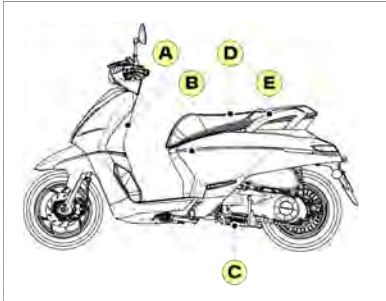

**A.** Vehicle identification number (V.I.N.).

**B.** Manufacturer's plate.

**C.** Engine number.

**D.** Tyre pressure label.

The label affixed under the saddle gives the cold tyre pressures when riding alone and with a passenger.



Temperature variations modify tyre pressure.  
The tyre pressure must be checked once a month when cold.

**E.** Fuel identification label.

The label next to the fuel filler cap indicates the type of fuel to use.

**Products to use**

Fuel	Unleaded
Engine oil	SAE 5W40 100% synthetic Minimum grade API SN
Relay box oil	SAE 80W90 API GL4
Coolant	MOTUL MOTOCOOL EXPERT -37°C Anti-corrosion and anti-freeze Protection -37°C/-35°F Nitrite free / Amine free / Silicate free
Brake fluid	DOT 5.1
Grease	High-temperature grease Multi-use grease
Fork oil	Hydraulic oil SAE10W



## INFORMATION ABOUT THE INSTRUCTIONS

Specific information is indicated by the following symbols:



Möbius band  
Recyclable.

Means that the product or the package can be recycled.



Explosive

The product may explode upon contact with a naked flame, spark or static electricity, or due to the effect of heat, an impact or friction.

Handle and keep away from heat sources and other causes of sparks.



Flammable

The product may ignite in contact with a naked flame, a spark or static electricity, or due to the effect of heat, friction, in contact with the air or in contact with water, releasing inflammable gases.

Handle and keep away from heat sources and other causes of sparks.



Corrosive

The product is corrosive.

It can attack (corrode) or destroy metals.

Contact with the product or splashes of the product may burn the skin and cause lesions to the eyes. Avoid any contact with the eyes and skin. Do not inhale.



Harmful to health

The product can be poisonous in high doses.

It may irritate the skin, eyes and airways.

It may cause skin allergies.

It may cause drowsiness or dizziness. Avoid all contact with the product.



Toxic or fatal

The product can rapidly be fatal.

It poisons rapidly, even at low doses. Wear protective equipment.

Avoid any contact (oral, skin, inhalation) with the product and wash all exposed areas carefully after use.



Harmful for the environment

The product pollutes.

It has a harmful effect (in the short and/or long term) on organisms in aquatic environments.

Do not dispose of it in the environment.



Do not throw away into a garbage can

One of the product's component is toxic and can be hazardous to environment. Do not throw the used product in the dustbin. Take it back to the trader or to a specific waste disposal site.



People's safety

Operation that can be dangerous for people.

People's safety can be seriously affected if the recommendations are not fully respected.



Important

Operation that can be hazardous to the vehicle.

Indicate the specific procedures that shall be followed in order not to damage the vehicle.




Note


Gives key information concerning operation of the vehicle.

GB

## DESCRIPTION OF THE VEHICLE

- 1 Instrument panel
- 2 Left brake lever
- 3 Brake fluid level
- 4 Utility hanger
- 5 Glove box
- 6 Battery / Fuses
- 7 Fuel tank
- 8 Grab handle
- 9 Central stand
- 10 Passenger footrests
- 11 Lateral stand
- 12 Throttle
- 13 Right brake lever
- 14 Expansion tank
- 15 Helmet compartment
- 16 Ignition switch / Rotating knob
- 17 USB socket
- 18 Oil level gauge

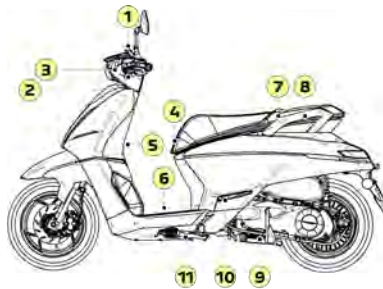

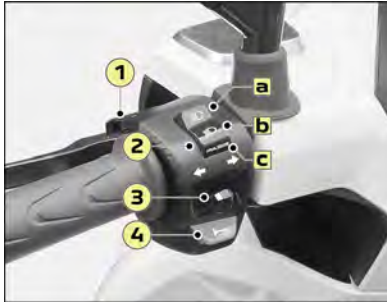

**1. "EXIT" control**

This control enables:

- Reset of the daily counters/consumption indicators (Press and hold for 3 seconds).

**2. Dipped lights/Headlights switch**

The dipped lights/headlights switch has 3 functions:

- A. High beam
- B. Dip beam
- C. Flashing the lights

**3. Indicators switch**

To indicate a change of direction, press the switch:

- Either to the right.
- Or to the left.

To stop the indicators flashing, press the switch.

**4. Horn switch**



**5. "OK" control**

This control enables:

- Reset of the daily counters/consumption indicators (Press and hold for 3 seconds).

**6. Hazard warning light switch**


The hazard warning lights only work with the ignition key in the "ON" position.

The hazard warning lights are switched off automatically 1 hour after the ignition was switched off, to preserve the battery.

**7. Emergency stop button / Starter switch**

- ☒ Set the button to this position in case of emergency to stop the engine.
- ↻ Set the button to this position before starting the engine.
- ⚙️ Press this button and simultaneously press the right or left brake lever to start the engine.

If the engine is stopped using the emergency stop button, the daytime running lights switch off automatically after 15 seconds.

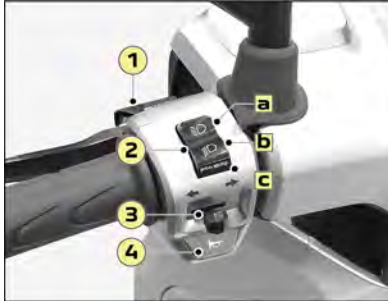

**1. "EXIT" control**

This control enables:

- Navigation within the menus (Short press).
- Confirmation of a choice (Press and hold for 2 seconds).

See chapter: "[Personalisation - Configuration](#)" menu.

**2. Dipped lights/Headlights switch**

The dipped lights/headlights switch has 3 functions:

- A. High beam
- B. Dip beam
- C. Flashing the lights


**3. Indicators switch**

To indicate a change of direction, press the switch:

- Either to the right.
- Or to the left.

To stop the indicators flashing, press the switch.

**4. Horn switch**

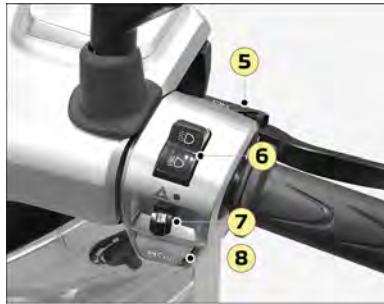

**5. "OK" control**

This control enables:

- Access to the instrument panel personalisation menu (Press and hold for 2 seconds).
- Navigation within the menus (Short press).
- Confirmation of a choice (Press and hold for 2 seconds).
- Reset of the trip recorder/consumption indicators/average speed indicators (Press and hold for 2 seconds).

See chapter: "[PERSONALISATION - CONNECTION - SETTINGS](#)" menu page 18 .

**6. Lighting switch / Daytime Running Light**

☞ The daytime running lights are switched on.

The daytime running lights switch off automatically 15 seconds after the vehicle has come to a complete stop and the ignition is off (Respiration mode).

☞ The headlights are switched on (Dipped-beam headlights or main-beam headlights).

The headlights light up when the engine is started. They go out when the ignition is switched off after the vehicle is at a complete standstill.

**7. Hazard warning light switch**

The hazard warning lights only work with the ignition key in the "ON" position. The hazard warning lights are switched off automatically 1 hour after the ignition was switched off, to preserve the battery.

**8. Emergency stop button / Starter switch**

- ☒ Set the button to this position in case of emergency to stop the engine.
- ☞ Set the button to this position before starting the engine.
- ☞ Press this button and simultaneously press the right or left brake lever to start the engine.

If the engine is stopped using the emergency stop button, the daytime running lights switch off automatically after 15 seconds.


## INSTRUMENTS: DJANGO ACTIVE

### Digital display



- 1. Clock.**  
Set the clock (See chapter: [Setting the digital display](#) page 13 ).
- 2. Call notification (depending on availability)**
- 3. Message notification (depending on availability)**
- 4. Bluetooth connection (depending on availability)**  
(See chapter: [Pairing a Bluetooth ® phone using the PEUGEOT MOTOCYCLES app\\_\(depending on availability\)](#) page 13 ).

✓ Each phone (model, operating system version) has its own special features and as such can influence the number display.  
Some telephones may not be compatible.

- 5. Outside temperature gauge (°C or °F).**  
The temperature shown is that read on the front of the vehicle.  
 The "risk of black ice" symbol comes on as soon as the temperature falls below 3°C.
- 6. Digital speedometer (km/h or mph).**  
The digital speed indicator displays the vehicle's driving speed.
- 7. Average consumption indicator (AVG) / Instantaneous consumption indicator (INST).**
  - The average consumption indicator indicates the fuel consumption from the last daily counter reset.
  - The instantaneous consumption indicator displays the amount of fuel consumed in the last few seconds.

Press briefly on the OK or EXIT button to switch between the average consumption indicator and the instantaneous consumption indicator.  
Reset the average consumption indicator:  
• Press and hold the OK and EXIT button for more than 3 seconds to reset the average consumption indicator to zero.  
**The day counter displayed is also reset to zero.**

- 8. Maintenance indicator.**
  - Each time the ignition is switched on, the display indicates the milage remaining before the next service.
  - When the kilometres to maintenance reach zero, the maintenance symbol remains lit on the display.

Maintenance frequency (Default value)
5000 km

✓ This period does not include the first inspection at 500 km and concerns normal servicing.  
See service book for harsh-use servicing.

- Resetting the maintenance counter.**
  - With the ignition off, press and hold the OK button then switch on the ignition. The maintenance counter flashes.
  - Release the OK button.
  - Press and hold down the "OK" button for more than 3 seconds to switch off the maintenance symbol and reset the maintenance counter.
  - Turn off the ignition.



You are advised to go to an authorised dealer to have the vehicle serviced and the message on the maintenance indicator erased.

- Choice of maintenance interval (Consult the maintenance manual).**
  - With the ignition off, press and hold the OK button then switch on the ignition. The maintenance counter flashes.
  - Release the OK button.
  - Select the maintenance interval by pressing briefly on the OK or EXIT buttons.

GB

- Press and hold the OK button for more than 3 seconds to confirm the setting.
- Turn off the ignition.

Available maintenance intervals	
	2500 km
	3000 km
	5000 km (Default value)
	10000 km

**9. Milometer.**

- The tripmeter displays and stores the number of kilometres travelled by the vehicle. The machine total kilometres remains in the memory when the battery is disconnected.

**10. Tripmeter (TRIP 1 / TRIP 2).**

- The day counters display and save the number of kilometers traveled during a given period.
- Press briefly on the OK or EXIT button to switch from TRIP 1 to TRIP 2.

Resetting the tripmeter:

- Display the day counter to be reset (TRIP 1 or TRIP 2).
- Press and hold the OK or EXIT button for more than 3 seconds to reset the day counter to zero.

**The average consumption counter is also reset to zero.**


**11. Autonomy indicator.**

- The autonomy indicator displays the number of kilometers that can be traveled with the fuel remaining in the tank (depending on the average consumption of last kilometres travelled).

✓ This figure may vary following a change in driving or in the relief, resulting in a significant variation in instantaneous consumption.

**12. Fuel gauge.**

When the fuel tank is full all the segments of the fuel gauge are lit.

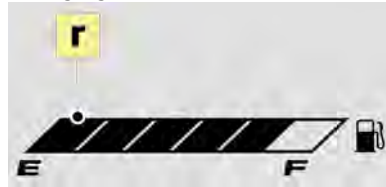


The final segment (r) is the reserve indicator. When the reserve level is reached, the last segment flashes, as well as the fuel pump icon. This indicates that there is approximately 1 liter of fuel remaining.

✓ Fill the tank as soon as possible to prevent a breakdown.

**13. Engine temperature gauge.**

The high temperature alert is indicated when all segments are flashing, along with the "temperature" symbol (t).

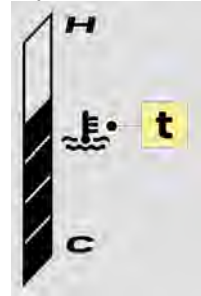


⚠ It is advisable to stop the engine and let it cool down. If the fault continues, have the vehicle checked by an approved dealership.

⚠ The presence of mist on the inside of the instrument panel is normal. It disappears a few minutes after the lights are switched on.

**14.** (See chapter: [Description of the indicators](#) page 17 ).

## Scrolling order of the counters

Press briefly on the OK or EXIT buttons to scroll through the different counters.

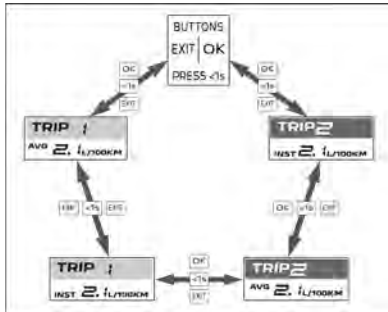

## Setting the digital display

The following settings are available:

- Distance and temperature units of measurement.
- Clock and time format.

### Procedure

- Turn on the ignition.
- Press the OK and EXIT buttons simultaneously for more than 3 seconds, the unit symbols flash.
- Modify the units by briefly pressing the OK button.
- Press and hold the OK button for more than 3 seconds to confirm this selection and move on to setting the clock format.
- Select the format by pressing briefly on the OK or EXIT buttons (12 hr / 24 hr).
- Press and hold the OK button for more than 3 seconds to confirm this selection and move on to the clock setting.
- The hour digits flash: press the OK or EXIT buttons briefly to change the setting.
- Press and hold the OK button for more than 3 seconds to confirm this selection and move on to setting the minutes.
- The minute digits flash: press the OK or EXIT buttons briefly to change the setting.
- Press and hold the OK button for more than 3 seconds to confirm the settings.
- Turn off the ignition.

### Pairing a Bluetooth ® phone using the PEUGEOT MOTOCYCLES app (depending on availability)



For safety reasons and because the driver's full attention is required, using a smartphone while driving is prohibited.



Enable your smartphone's mobile browser data (or Wi-Fi).  
If another smartphone is already connected to the vehicle, pairing with a second smartphone will be rejected.  
Check that there are no other connected smartphones nearby.

GB

1. Download the PEUGEOT MOTOCYCLES app from your smartphone's app store.
2. Activate the Bluetooth function on your smartphone.
3. Select the name of the system from the list of devices detected by the PEUGEOT MOTOCYCLES app.
4. On the system, accept the smartphone connection request.
5. Using your telephone key pad, enter the same PIN code displayed on the screen and confirm.



Do not use the smartphone's Bluetooth menu to connect to the dashboard.  
If this fails, you are advised to deactivate then reactivate the Bluetooth function on your phone.




Telephones (models, operating system versions) each have their own specific features which may affect the pairing process.  
Some telephones may not be compatible.

## Indicator lights and warning lights

The warning lights inform the driver of the start-up of a system or appearance of a malfunction.

- On ignition, some warning lights are displayed for a few seconds.
- Once the engine is started, these warning lights will disappear.

**If they remain on, use the table to check the relevant warning light before driving off (See chapter: [Description of the indicators page 17](#) ).**



The ABS system ON warning light disappears when the vehicle starts to move.

Emissions control system failure warning light. Engine self-diagnostic (MIL).  
Wheel anti-lock indicator light (ABS).  
These indicators light up in two ways (steady or flashing).



In all cases, you are advised to have the vehicle checked by an approved dealer.

**For further information concerning the indicator lights, please consult the table in the relevant section.**

**Digital display**



**1. Fuel gauge.**



The fuel gauge indicates the quantity of fuel available in the tank. When the reserve level is reached, the (p) warning light appears in orange, indicating a minimum fuel level. There are 2 litres of fuel remaining.

✓ Fill the tank as soon as possible to prevent a breakdown.

**2. Clock.**

Time setting (See chapter: "PERSONALISATION - CONNECTION - SETTINGS" menu page 18 ).

**3. Battery voltage warning icon.**



If the battery charge symbol appears in red while driving, you are advised to have the battery charge system checked by an approved dealer.

**4. Engine temperature warning icon.**

A high temperature reading is indicated by a red warning light.



You are advised to switch off the engine and check the coolant level after it has cooled down. If the level is correct, have the vehicle checked by an approved dealer.

**5. Bluetooth signal reception.**

The smartphone's reception signal strength. See chapter: [Pairing a phone with Bluetooth](#) page 18 .

**6. Smartphone connection / Call notification.**

The highlighted icon indicates a Bluetooth connection with a smartphone. The number display appears when the Bluetooth connection is activated and a Smartphone is connected.



Each phone (model, operating system version) has its own special features and as such can influence the number display. Some telephones may not be compatible.

**7. Smartphone connection / Message notification.**

The highlighted icon indicates a Bluetooth connection with a smartphone. The message display appears when the Bluetooth connection is enabled and a smartphone is connected.




Each phone (model, operating system version) has its own special features and as such can influence the number display. Some telephones may not be compatible.

**8. Bluetooth connection.**

The highlighted icon indicates a Bluetooth connection with a smartphone. See chapter: [Pairing a phone with Bluetooth](#) page 18 .

**9. Display area for an incoming call or message.**

Displays the name or number of an incoming call or message.



**10. Outside temperature gauge (°C or °F).**

The temperature shown is that read on the front of the vehicle.



The "risk of black ice" symbol comes on as soon as the temperature falls below 3°C.

**11. Digital speedometer (km/h or mph).**

The digital speed indicator displays the vehicle's driving speed.

**12. Maintenance indicator.**

Each time the ignition is switched on, the display indicates the milage remaining before the next service.

When the kilometres to maintenance reaches zero, the maintenance symbol remains lit on the display.

Maintenance frequency
5000 km



This period does not include the first inspection at 500 km and concerns normal servicing. See service book for harsh-use servicing.

**Resetting the maintenance counter.**

(See chapter: "PERSONALISATION - CONNECTION - SETTINGS" menu page 18 ).



You are advised to go to an authorised dealer to have the vehicle serviced and the message on the maintenance indicator erased.

**13. Milometer.**

The tripmeter displays and stores the number of kilometres travelled by the vehicle. The machine total kilometres remains in the memory when the battery is disconnected.

**14. Trip recorders (TRIP 1 / TRIP 2) /**

**Range/average consumption/instantaneous consumption/average speed indicator.**

The day counters display and save the number of kilometers traveled during a given period.

- Press briefly on the OK or SELECT button to switch from one counter to another.

Reset the counters:

- Display the day counter to be reset (TRIP 1 or TRIP 2).
- Press and hold the OK button for more than 2 seconds to reset the trip recorder.


**The consumption and average speed counters are also reset to zero.**

**15. Area displaying the warning lights / Operating lights**

(See chapter: [Description of the indicators](#) page 17 ).

**Scrolling order of the counters**

Press briefly on the UP or DOWN buttons to scroll through the different counters.

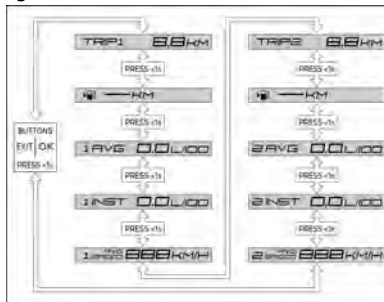

**Indicator lights and warning lights**

The warning lights inform the driver of the start-up of a system or appearance of a malfunction.

- On ignition, some warning lights are displayed for a few seconds.
- Once the engine is started, these warning lights will disappear.

**If they remain on, use the table to check the relevant warning light before driving off (See chapter: [Description of the indicators](#) page 17 ).**



The ABS system ON warning light disappears when the vehicle starts to move.

Emissions control system failure warning light. Engine self-diagnostic (MIL). Wheel anti-lock indicator light (ABS).










These indicators light up in two ways (steady or flashing).



In all cases, you are advised to have the vehicle checked by an approved dealer.

**For further information concerning the indicator lights, please consult the table in the relevant section.**

## Description of the indicators

Indicator	Status	Cause	Actions / Observations
 Left indicators	Flashing	The indicator control is activated to the left.	If the warning light flashes quickly, there is a fault in the direction indicators.
 Wheel anti-lock system (ABS)	Flashing / fixed	The ABS system is faulty.	<p>The vehicle has a standard braking system. Drive carefully at moderate speed and have the vehicle checked by an authorised dealer.</p> <hr/> <p> At very slow speeds and during shut-down, the lamp ABS blinks slowly, indicating that the system is deactivated.</p>
 Daytime lights <sup>a</sup>	Fixed	The lighting control is set to the "Daytime lights" position.	
 Malfunction warning light for the antipollution system / Engine self-diagnostic	Fixed	The anti-pollution system is faulty.	The engine power may be limited. You are advised to have the vehicle checked by an authorised dealer.
	Flashing	The engine control system is faulty.	You are advised to have the vehicle checked by an authorised dealer.
 "Side light" bulbs	Fixed	The parking lights are on.	
 High beam	Fixed	The lighting control is in the "main-beam headlamps" position.	
 Right indicators	Flashing	The indicator control is activated to the right.	If the warning light flashes quickly, there is a fault in the direction indicators.
 Hazard warning lights	Flashing	The hazard warning lights control is activated.	The left and right direction indicators, as well as their associated warning lights, flash simultaneously. Automatic cut out after 1 hour to preserve the battery.

<sup>a</sup> Depending on model

## "PERSONALISATION - CONNECTION - SETTINGS" menu

### This menu accesses the following functions:

- Instrument panel personalisation (TRIP 1 / TRIP 2).
- Connectivity.
- Language selection.
- Measurement unit selection.
- Time setting.
- Backlighting.
- Background colour.

Switch on the ignition and hold the EXIT and OK command for 2 seconds to open the menu.



- ✓ Manipulations are only possible when the vehicle is stopped.

### Pairing a phone with Bluetooth



For safety reasons and because the driver's full attention is required, using a smartphone while driving is prohibited.

- ✓ Enable your smartphone's mobile browser data (or Wi-Fi).  
If another smartphone is already connected to the vehicle, pairing with a second smartphone will be rejected. Check that there are no other connected smartphones nearby.

1. Activate the Bluetooth function on your smartphone.

2. Select the name of the system from the list of devices detected (Bluetooth menu).
3. On the system, accept the smartphone connection request.



If this fails, you are advised to deactivate then reactivate the Bluetooth function on your phone.



Telephones (models, operating system versions) each have their own specific features which may affect the pairing process.  
Some telephones may not be compatible.

### Pairing a Bluetooth® phone using the PEUGEOT MOTOCYCLES app (depending on availability)



For safety reasons and because the driver's full attention is required, using a smartphone while driving is prohibited.



Enable your smartphone's mobile browser data (or Wi-Fi).  
If another smartphone is already connected to the vehicle, pairing with a second smartphone will be rejected. Check that there are no other connected smartphones nearby.

1. Download the PEUGEOT MOTOCYCLES app from your smartphone's app store.
2. Activate the Bluetooth function on your smartphone.
3. Select the name of the system from the list of devices detected by the PEUGEOT MOTOCYCLES app.
4. On the system, accept the smartphone connection request.

5. Using your telephone key pad, enter the same PIN code displayed on the screen and confirm.



Do not use the smartphone's Bluetooth menu to connect to the dashboard.  
If this fails, you are advised to deactivate then reactivate the Bluetooth function on your phone.



Telephones (models, operating system versions) each have their own specific features which may affect the pairing process.  
Some telephones may not be compatible.

The functions which can be accessed via the configuration menu are described in detail in the table below.


Menu	Button action	Sub-menu	Comments
	→ EXIT + OK > 2S	→ OK > 2S ← EXIT > 2S	Move through the sub-menus by briefly pressing the EXIT or OK buttons. Confirm with OK by pressing and holding for more than 2 seconds. Exit the sub-menus by pressing and holding for more than 2 seconds on the EXIT button.
Driving	SELECT ↑ <1S ↓ EXIT	• TRIP1	• TRIP 1 • Remaining range • Average consumption • Immediate consumption • Average speed
		• TRIP2	• TRIP 2 • Remaining range • Average consumption • Immediate consumption • Average speed
Connection	SELECT ↑ <1S ↓ EXIT	• Bluetooth	• Activated • Deactivated
		• Call	• Activated • Deactivated
		• Message	• Activated • Deactivated

GB

Menu	Button action	Sub-menu	Comments	
	→ EXIT + OK > 2S	→ OK > 2S ← EXIT > 2S	Move through the sub-menus by briefly pressing the EXIT or OK buttons. Confirm with OK by pressing and holding for more than 2 seconds. Exit the sub-menus by pressing and holding for more than 2 seconds on the EXIT button.	
Setting	SELECT ↑ <1S ↓ EXIT	Language	<ul style="list-style-type: none"> <li>• Chinois</li> <li>• English</li> <li>• Français</li> <li>• Deutsch</li> <li>• Español</li> <li>• Italiano</li> </ul>	Language selection.
		• Units	<ul style="list-style-type: none"> <li>• Metric</li> <li>• Imperial</li> </ul>	Measurement unit selection: If the distance unit is kilometres, the outside temperature is displayed in °C. The autonomy indicator is in L/100 km. If the distance unit is miles, the outside temperature is displayed in °F. The autonomy indicator is in MPG.
		• Time	<ul style="list-style-type: none"> <li>• Time</li> <li>• Minute</li> <li>• 24h / AM / PM</li> </ul>	Time setting. Set using EXIT or OK.
		Backlighting	<ul style="list-style-type: none"> <li>• Automatic</li> <li>• Level1</li> <li>• Level2</li> <li>• Level3</li> </ul>	Digital display brightness setting: Automatic. Level1: Low. Level2: Average. Level3: High.
		• Maintenance	• Reset	Resetting the maintenance counter.
			<ul style="list-style-type: none"> <li>• 2500</li> <li>• 3000</li> <li>• 5000</li> <li>• 10000</li> </ul>	Choice of maintenance interval (Consult the maintenance manual).
		• Colour	<ul style="list-style-type: none"> <li>• Blue</li> <li>• Red</li> <li>• Gold</li> </ul>	Choice of digital display colour.
• Showroom mode		The Showroom mode disappears when the vehicle has travelled more than 30 km.		

## KEY-OPERATED IGNITION SWITCH FUNCTIONS (DJANGO ACTIVE)

2 keys are delivered with the vehicle.

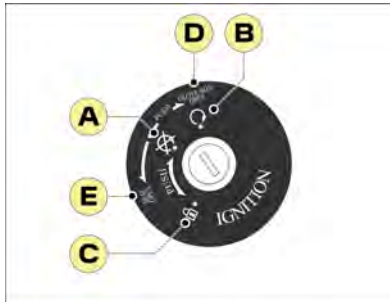

### A. Engine off position

The engine is off. Power to the electrical circuit is off. The key can be removed.

### B. On position

Power to the electrical circuit is on. The engine can be started. The key cannot be removed.

### C. Steering unlocked

From the engine off position, the handlebars must be turned to the left, and the key must be simultaneously inserted and turned to the left. The key can be removed.

### D. Opening the glove box

From the engine stop position, the key must be simultaneously pressed and turned to the right to open the glove box.

### E. Opening the storage compartment

From the engine stop position, the key must be turned to the left to unlock the saddle.

## SMART KEY KEY, ROTATING KNOB AND OPENINGS (DJANGO LEGACY / SPORT)


### Smart Key key

Your vehicle is delivered with:

- Two Smart Key.
- A label with the key code (A label is affixed in the vehicle's manual in the place provided for this purpose).



The code is essential for key programming.

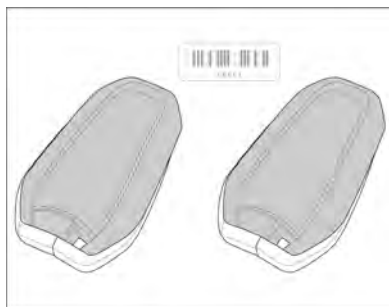

The Smart Key key is an electronic key which is recognised by the system within a radius of 1.5 meters and:

- Switches on the engine.
- Unlocks the storage compartment.
- Opens the glove box.



Do not store the Smart Key in a place where it could become damaged or be accidentally broken.

For example, storing the Smart Key in the rear pocket of clothing.



To avoid any risk of accident of theft, never leave the Smart Key key near the vehicle or in one of the storage compartments.


### Electrical disturbances

The Smart Key may not function if it is near an electronic appliance: telephone, laptop, intense magnetic fieldsetc.

### Rotating knob



If the smart key key is not recognised, the rotating knob cannot be turned. In this case the lighted surround flashes quickly for 5 seconds.

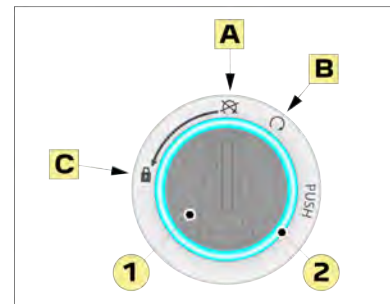

1. Rotating knob.
2. Lighted surround (Blue).

### A. Stop position.

Power to the electrical circuit is off.

Press and hold the rotating knob for one second to wake up the system; the lighted surround lights up to indicate the presence of the smart key: The knob is unlocked. Turn the rotating knob to the "ON" (B) position within a maximum of 5 seconds.

GB

**B. On/start position.**

Power to the electrical circuit is on. The engine can be started.



With the ignition on, the circuit is automatically cut off after 30 seconds if the engine is not started.

**C. Steering unlocked.**

The steering is locked and all of the electrical circuits are shut off.

**Lock the steering.**

- Turn the steering to the left.
- Press the rotating knob for one second to wake up the system: the light around the edges lights up.
- Turn the rotating knob to the lock position.

**Unlock the steering.**


- Press the rotating knob for one second to wake up the system: the light around the edges lights up.
- Turn the rotating knob to position (A).

**No Smart key recognition****Possible causes of non-recognition:**

- Low battery or incorrectly positioned.
- Radio disturbance.
- Damaged Smart Key.

Should the Smart Key battery fail, the vehicle can be started by following these steps:

- Position the Smart Key against the left fairing at the place shown in the illustration.

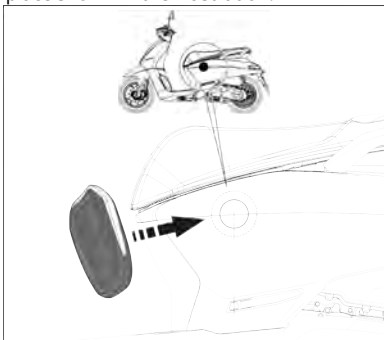

- Press and hold the rotating knob for 2 seconds.
- Turn the rotating knob to "ON".
- The vehicle should start.

If the key is not recognised, move it slightly and try again.

**Possible causes of non-recognition:**

- Low battery or incorrectly positioned.
- Radio disturbance.
- Damaged Smart Key.


**Changing the battery**

If the battery is worn out, the lighted surround on the rotating knob flashes slowly when the ignition is switched on.



You are advised to change the battery every 2 years.

Battery: CR2032 / 3 Volt.

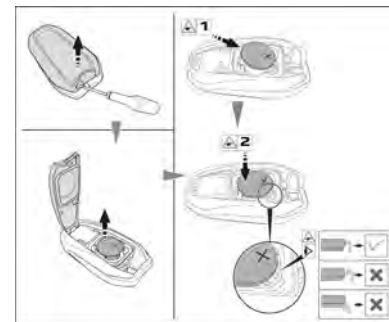

- Unclip the Smart Key cover.
- Carefully remove the spent battery.
- Carefully fit the new battery, ensuring it is the right way round and following the installation instructions.
- Clip the cover on.

**Replacing or adding a smart key**

If you lose or would like an additional smart key, go to your approved dealer with the vehicle registration certificate, your ID card and label with the key codes.



Up to 4 smart key keys can be registered in the system.

## Openings

If there is a smart key:

- The storage compartment can be opened by pressing the button (1) for one second.
- The glove compartment can be opened by pressing the button (2) for one second.



When the vehicle is moving, the opening buttons are not active.



You are advised not to leave any objects in the storage compartments, whatever the value (helmet, document-holder, etc.), the manufacturer may not be held liable in the event of theft or intrusion.



Do not exceed the maximum load for the compartment, which is 5 kg. The seat compartment heats up as the engine heats up. Do not store food, flammable products or any products likely to be damaged by heat in the compartment.


Water may penetrate the storage compartment when washing or during periods of heavy rain. You are advised to protect any sensitive items from damp.

Do not store items that are too bulky in the compartment, as you risk damaging the items or the seat and its hinge.

## EQUIPMENTS

### Accessory socket (USB)

Located in the glove box, an accessories socket, which is powered when the ignition is on, enables you to connect portable equipment (Telephone number, GPS, ... ) (1A maximum).

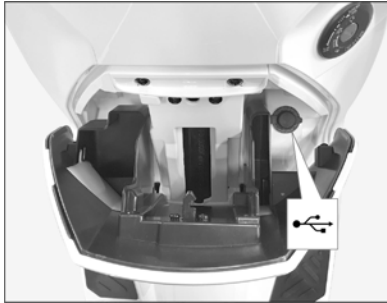

The equipment can recharge automatically during use.



Always replace the cap after use to prevent moisture from entering the socket.

### Utility hanger



Located in front of the saddle this is used to hang a bag weighing not more than 2.5 kg.

### Lateral stand

**The lateral kickstand is fitted with an ignition cut-out which prevents the engine from being started while the stand is down.**

This system reminds the driver to lift the stand before starting the engine. If the engine starts with the kickstand down, it is essential to have the circuit checked by an approved dealer.



The stand is only designed for the weight of the vehicle. It is inadvisable to sit on the vehicle when it is on the kickstand.

## ACCESSORY

### Front luggage carrier (Depending on equipment)

The front luggage carrier can bear a maximum load of 3 kg.

### Rear luggage carrier (Depending on equipment)

The rear luggage carrier can bear a maximum load of 6 kg.



To not place luggage on it that is too bulky and may impair the lighting and steering.

Do not exceed the maximum recommended load for each luggage carrier.

Attach luggage firmly to the vehicle, even over a short distance.

## CHECKS TO PERFORM BEFORE USE

The user must personally ensure that his vehicle is in good condition. Certain safety elements may show signs of damage even when the vehicle is not used. e.g. prolonged exposure to bad weather can lead to oxidation in the braking system or a pressure drop in the tyres which can have serious consequences. In addition to a simple visual inspection, it is extremely important to check the following points before use.



These checks only take a few minutes and help to keep your vehicle in good condition, for optimum use combining reliability and safety.

If one of the elements in the checklist does not work properly, ask your registered dealer to check it and have it repaired if necessary before using the vehicle.

## ADVICE FOR STARTING UP AND DRIVING

### Warning

Before using the vehicle for the first time, make sure you are familiar with all the controls and their respective uses. If you are not sure about the functions of any of the controls, your registered dealer can answer your questions and give you any help you may require.



As exhaust fumes are toxic, the engine must be started in a well-ventilated area. It must never be allowed to run in a closed space, even for a short time.

### Eco mode

Adopt smooth driving behaviour


- Turn the acceleration handle gradually, not suddenly.
- Anticipate braking using the engine brake.
- Limit the vehicle load as well as aerodynamic resistance.
- Regularly check the inflation pressure in your tyres, and refer to the label under the seat.
- Avoid heating up the engine while stationary: the engine heats quicker when you drive.
- Have your vehicle serviced according to the manufacturer's maintenance plan.

**These attitudes contribute to economising fuel consumption, reducing CO<sup>2</sup> emissions and alleviating the background sound of traffic.**

## Driving on flooded roads



You are strongly advised not to drive on flooded roads as this may seriously damage the engine, transmission and electrical systems on your vehicle.

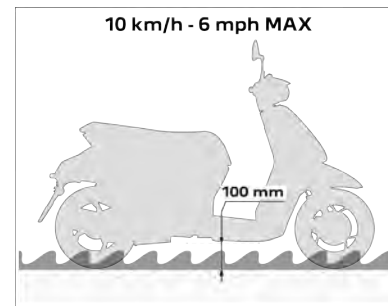

If you cannot avoid driving through flood water:

- Check that the water depth does not exceed 100 mm, taking into account waves which could be generated by other road users.
- Under no circumstances exceed a speed of 10 km/h.
- Once out of the flooded area, brake gently several times to dry out the brakes as soon as the safety conditions allow it.

GB

### Inspection before setting off

Component	Checks
Fuel	<ul style="list-style-type: none"> <li>• Check the fuel level in the tank.</li> <li>• Top up with fuel if necessary.</li> <li>• Check that there is no fuel leak.</li> </ul>
Engine oil	<ul style="list-style-type: none"> <li>• Check the level of the engine oil.</li> <li>• If necessary, top up with the recommended oil.</li> </ul>
Coolant	<ul style="list-style-type: none"> <li>• Check the coolant level in the header tank.</li> </ul>
Disk brakes	<ul style="list-style-type: none"> <li>• Check brake operation.</li> <li>• Have an approved dealer check them if they feel soft.</li> <li>• Check brake pad wear.</li> <li>• Check the level of brake fluid in the reservoir.</li> </ul>
Lighting, signalling, indicators, horn	<ul style="list-style-type: none"> <li>• Check operation.</li> <li>• Correct if necessary.</li> </ul>
Wheels and tyres	<ul style="list-style-type: none"> <li>• Check the tyre wear and condition.</li> <li>• Check the tyre pressures cold.</li> <li>• Correct if necessary.</li> </ul>
Throttle	<ul style="list-style-type: none"> <li>• Check the throttle handle turns smoothly and returns correctly to its starting position.</li> </ul>
Steering	<ul style="list-style-type: none"> <li>• Check the free rotation of the steering.</li> </ul>
Stand	<ul style="list-style-type: none"> <li>• Check that the central and side stands can be unfolded smoothly.</li> <li>• Operation of the ignition cut-out.</li> </ul>

### Starting the engine

For greater safety, place the vehicle on its central stand before starting the engine.



Ensure that the switch under the saddle is in position UNLOCK.

- Turn the ignition key to "ON".
- Ensure that the throttle is in the OFF position.
- Press one of the brake levers while pressing the starter button. Do not press the starter for more than 10 seconds.
- Release the starter button as soon as the engine starts.




If the engine does not start, release the starter button and the brake lever, wait a few seconds and try again.

### Driving

#### Starting off

- The vehicle is on its stand with the engine running.
- Squeeze the brake lever with your left hand, grip the grab handle with your right hand and push the vehicle forwards to fold up the central stand.
  - Sit on the vehicle.
  - Release the left brake and turn the throttle slowly with your right hand to start moving.

### Accelerating and decelerating

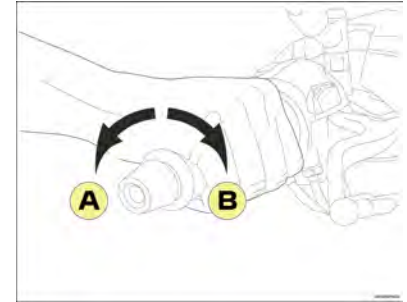

To accelerate, turn the throttle towards (A). To slow down, turn the throttle towards (B).

### Braking



The ABS system enables the rider to retain control of the vehicle when braking in slippery conditions.

#### ABS braking system (1 channel)

- This is a wheel anti-lock system. Controlled by the right lever, it acts on the front wheel.
- The left brake lever operates like a standard braking system by acting on the rear wheel.

#### Use of the brakes

- Close the throttle.
- Activate the brake system by gradually increasing the pressure.



Using only one brake reduces braking efficiency and can lock the wheel, causing a fall.  
Avoid braking suddenly on wet roads or in bends.  
Reduce speed on steep slopes to avoid prolonged braking, as overheating will reduce braking efficiency.

## Switching off the engine and parking

The engine is switched off when at idling speed by turning the ignition key to "OFF".

The vehicle should be parked on flat ground.

- Either on the middle stand.
- Or on the lateral stand.

Each time the vehicle is parked, the steering should be locked and the ignition key removed. The ignition circuit can be neutralised by setting the switch under the saddle to LOCK.

## Fuel supply



The engine must be switched off in order to fill the fuel tank in complete safety.

A label affixed near the fuel cap reminds you of the type of fuel to use.



**Any fuel containing up to 10% ethanol can be used (E5, E10).**

**An ethanol content of more than 10% by volume is not permitted. E85 must not be used.**

The fuel tank is located under the saddle.



### 1. Fuel tank cap.

- Insert the petrol pump nozzle into the filling orifice. Make sure the nozzle is correctly inserted into the filling pipe.
- Do not overfill the tank.

**Stop filling when the nozzle stops for the first time.**



Do not fill the fuel tank to excess: The fuel may expand due to the engine heat or heat from the sun and overflow.



Any overflows must be wiped up immediately. The fuel could actually damage painted surfaces or plastic parts.

## Running in the engine

Running in the engine is essential to guarantee its performance and lifetime.

During the running-in period, you are advised not to overload the engine and to avoid exceeding a higher than normal operating temperature.

From 0 to 500 km:	• Do not hold the throttle handle open at more than half its distance of travel over a long trip.
From 500 to 1000 km:	• Do not hold the throttle handle open at more than 3/4 its distance of travel over a long trip.

Once this mileage has been done, the vehicle can be used normally.

## SERVICE OPERATIONS

### Maintenance advice

**Ensure the servicing schedule for your vehicle is strictly adhered to in order to maintain warranty rights.**

A table of inspections for the maintenance schedule is inserted into the maintenance booklet. The registered dealer must add his stamp, the date of servicing and the number of kilometres the vehicle has covered.

**In order to maintain maximum safety and reliability of your vehicle, you are advised to have maintenance and repairs carried out by a registered dealer who has the necessary technical training, specific tools and spare parts.**

### Environment / Recycling

Worn parts replaced during routine maintenance (mechanical parts, battery, etc.) must be disposed of with specialised bodies.

At the end of its life, the vehicle must be taken to an authorised centre for recycling.

In all cases, comply with the local laws.



Batteries contain harmful substances. They must be disposed of according to the legal requirements and must under no circumstances be thrown away in the household waste.

### Cleaning the vehicle



The bodywork is made of plastic parts that can be painted or are shiny. Do not use solvents or cleaning products that are too corrosive.



Do not use high pressure cleaners which may cause water to infiltrate the following parts: seals, bearings and hinges, electrical components such as connectors, contactors and lighting.

Wash the bodywork with soapy water and rinse with generous amounts of clear water.

The vehicle can be dried with a chamois leather. After washing the vehicle, brake several times at low speed to dry out the brakes.



The vehicle should be washed in a place equipped for wastewater collection.

Certain silicon-based products can alter the quality of the paintwork. In case of need or doubt, a registered dealer can advise you on using cleaning products or restoring scratched bodywork.

### Spark plug inspection or replacement




It is essential to use a resistive spark suppressor and a resistive spark plug in accordance with the manufacturer's recommendations.

The engine must be cold.


- Remove the cap and rubber gasket from the expansion tank.
- Remove the saddle storage compartment (6 screw).



- Disconnect the suppressor (2).
- Remove the spark plug.

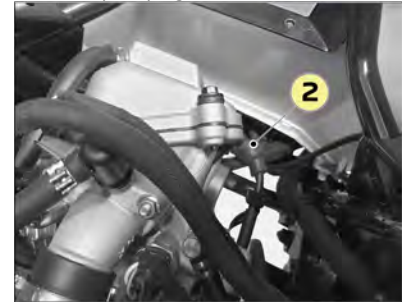

- Measure the electrode gap (A) and correct it if necessary

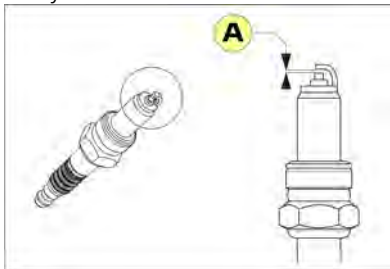

Spark plug	NGK CPR9EB-9
Electrode gap	0.7 to 0.8 mm

### Reassembly

- Fit and screw in the spark plug manually.
- Tighten the spark plug with a spanner.
  - 1/8 - 1/4 turn for a reused spark plug.
  - 1/2 turn for a new spark plug.



Ensure the suppressor is correctly clipped onto the spark plug. Have the torque quickly checked by a registered dealer.

### Checking the engine oil level




Check the oil level every 1000 km / 600 Mi or before a long journey.

- To correctly measure the oil level, place the vehicle on the centre stand on flat ground.
- Start the engine, let it run for a few minutes and then stop it.
- After switching off the engine, wait for 5 minutes to allow the engine oil time to return to the oil sump.
- Remove the oil filler cap/gauge (1).



- Wipe the filler cap/gauge using a clean cloth and reinsert it into the filler hole without screwing it up.

- Remove the filler cap/gauge and check the oil level.
- The oil level shall be between the minimum (A) and maximum (B) level marks without exceeding the latter.

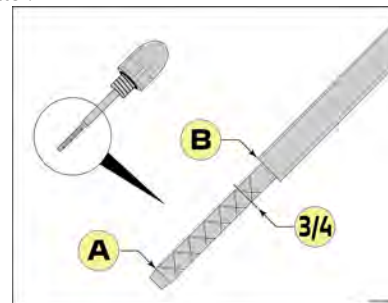

- If the oil level is close to the minimum mark or lower, you are advised to immediately top up the level to 3/4 in small amounts using the oil recommended by the manufacturer.



Too much oil will noticeably restrict the vehicle's performance.

### Changing the engine oil



We advise you to go to a registered dealer for draining.



Oil contains substances which are harmful to the environment. Your dealer is equipped to dispose of used oil without endangering the environment and in compliance with current standards.

### Engine oil

0.8 l at oil change

SAE 5W40 100% synthetic  
Minimum API SN quality


GB

The engine must be drained when it is warm to allow the oil to run easier.

GB



- Place the vehicle on its central stand on flat ground.
- Put on protective gloves.
- Remove the drainage cap and its seal (1) and allow the oil to drip into a recipient.

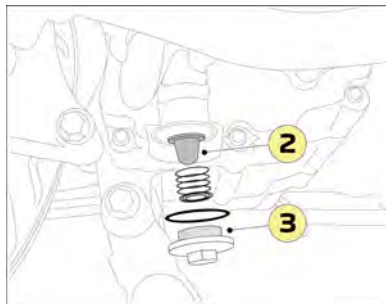

- Remove the strainer cap (3) and clean the strainer (2).
- Put back the drainage cap and strainer cap, fitted with a new seal.
- Pour the required quantity of oil corresponding to the manufacturer's standards into the filler hole.
- Start the engine and let it run for a short while.
- Add oil if necessary.
- Check that the oil drain plug is sealed.

#### Draining the relay box



We advise you to go to a registered dealer for draining.



Oil contains substances which are harmful to the environment. Your dealer is equipped to dispose of used oil without endangering the environment and in compliance with current standards.

The gearbox must be drained when the engine is warm so that the oil will run easier.



- Place the vehicle on its central stand on flat ground.
- Place a container under the drain port.
- Remove the relay box filler cap (1).
- Remove the drain plug (2).
- Re-install the plug with a new seal.
- Pour the required quantity of oil corresponding to the manufacturer's standards into the filler hole.
- Fit the filler cap.

#### Relay box

SAE 80W90 API GL4

Quantity

0.17 l at oil change

#### Replacing the air filter



You are advised to contact a registered dealer to have this operation carried out.

## Coolant

### Coolant level check



The coolant level must be checked when the engine is cold.


Check the coolant liquid level before setting off each time.

Any supplementary coolant used must be coolant recommended by the manufacturer.

When topping up, a small amount of coolant may escape through the overflow pipe under the vehicle.

Never remove the radiator cap when the engine is hot.

- Place the vehicle on its central stand on flat ground.
- Open the storage compartment.
- Remove the plastic cover.

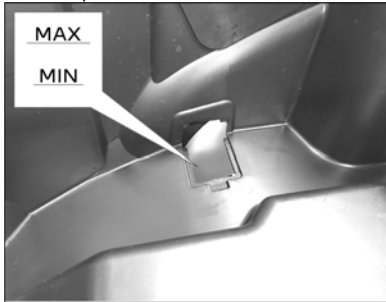

- The level of coolant should be between the minimum and maximum markers without exceeding the latter.
- If necessary add coolant in the header tank.

Coolant
Coolant: MOTUL MOTOCOOL EXPERT -37°C Anti-corrosion and anti-freeze Protection -37°C/-35°F Nitrite free / Amine free / Silicate free

### Replacing the coolant

Replace the coolant at the frequencies recommended in the periodic maintenance table.




We recommend that you take the vehicle to an approved dealer to replace the coolant.

### Throttle cable play

Throttle play must be between 3 and 5 mm at the handle (A).

If play is not correct, use the setting screw to adjust it (1).

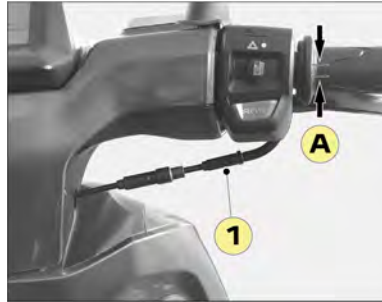


### Tyres

Tyre pressure should be cold-checked regularly. Incorrect pressure causes abnormal wear and affects road behaviour, thus making driving dangerous.

### Cold inflation pressure (bar)

Front	Solo	1.75
	Pillion	2.0
Rear	Solo	2.0
	Pillion	2.25

If the wear limit on the tread is reached (A), you are advised to go to a registered dealer to change the tyres.

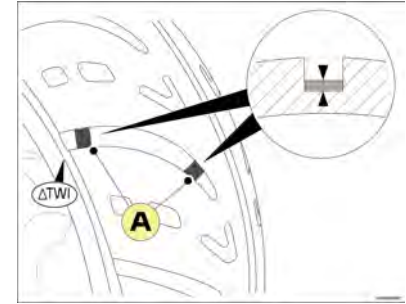

When replacing tyres, you are advised to mount tyres of the same brand and equivalent quality. In case of puncture, it is forbidden to mount an inner tube in a tubeless tyre.



Tyres contain substances that are harmful to the environment. Your dealer is equipped to dispose of used tyres without endangering the environment in compliance with current standards.

### Brake inspection




We advise you to visit a registered dealer for the replacement of these components.

GB

Each brake pad is equipped with wear indicators. The indicators enable you to check the wear on the pads without having to disassemble the brake.

- Check the wear on the pads by verifying the position of the wear indicators while depressing the brake. If a brake pad is worn to the point that the indicator touches the brake disk, have the pair of brake pads replaced by an approved distributor.

**Front brake pads**

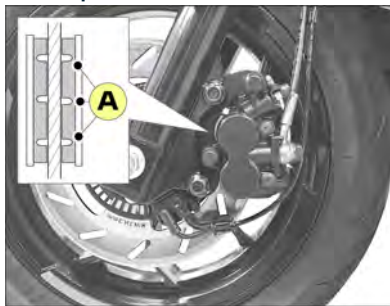

- Brake pad wear indicators (A).

**Rear brake pads**




- Brake pad wear indicators (A).

**Brake fluid**

The brake fluid levels must be checked regularly through the braking unit inspection window (A).

- ⚠ Before verifying the liquid level, ensure that the reservoir of the brake master cylinder is horizontal.

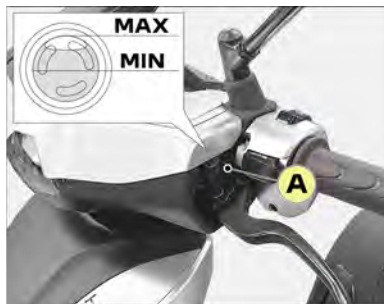

- ⚠ If the level is near the minimum mark, it is advisable to take the vehicle to an approved dealer as soon as possible to check the brake system and refill it if necessary.

Brake fluid	DOT 5.1
-------------	---------

**Battery**

- ⚠ Make sure you check that the battery is disconnected before performing any operations on it.

- ⚠ Battery power leads must never be disconnected while the engine is running. To avoid damage to the electronic circuit, do not charge the battery if it is connected to the vehicle.

- ⚠ The sulphuric acid contained in the battery electrolyte can cause serious burns.

Avoid all contact with the skin, eyes or clothing and always protect your eyes when working near the battery.

- ⚠ In case of leakage, you are advised to consult a registered dealer who is equipped to replace and dispose of batteries without endangering nature and the environment.

- ⚠ A battery produces explosive gases. Keep the battery away from sparks, flames, cigarettes, etc. It should be charged in a well-ventilated area.

**Extended periods of immobilisation and storage**

- ⚠ If the vehicle is not used for an extended period, the battery will slowly discharge naturally or due to its electronics or certain accessories and must thus be regularly charged.

If the vehicle is not used for a period of 1 month or longer, the battery charge must be preserved.

- Using a maintenance charger (if the vehicle is not used for a long period).
- If not, by disconnecting it from the vehicle (if the vehicle is not used for a period of less than 2 months).

- ⚠ If these recommendations are not followed, the battery may go into deep discharge. In this case the manufacturer's warranty will be void.

## Battery charge



A battery produces explosive gases. Keep the battery away from sparks, flames, cigarettes, etc. It should be charged in a well-ventilated area.



The battery must be charged in a well-ventilated area with a suitable charger that can feed a tenth of the battery capacity to avoid premature destruction. You are therefore advised to go to a registered dealer to carry out this operation.



To avoid any risk of destruction of an electrical component, you are strongly advised not to use a booster charger to start the vehicle.

- Disconnect and remove the battery.
- Charge the battery to 100% beforehand.
- Use a maintenance charger or charge monthly.
- Before restarting, the battery must be charged to 100%.

## Removal of the battery

- Remove the footboard mat.
- Remove the battery cover.
- Disconnect the battery in the following order:
  - The negative terminal (1).
  - The positive terminal (2).




## Installing the battery

- Connect the battery in the following order:
  - The positive terminal (1).
  - The negative terminal (2).



## Fuses

- The fuses are accessed by removing the saddle storage compartment (fuses from F1 to F6).
- Find the faulty fuse by looking at the condition of its filament.

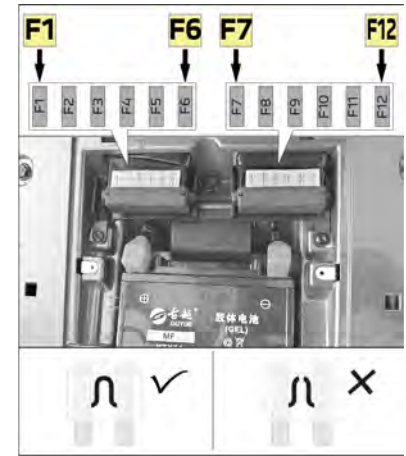

If a fuse often blows this is usually a sign of a short circuit in the electrical circuit. You are advised to have the system checked by a registered dealer.

Before changing a fuse, you must find the reason for the fault and correct it.

Always replace the faulty fuse with a fuse of the same rating.



You are advised to switch off the ignition before changing a fuse and always to replace it with a fuse of the same rating. If you do not do so, this may lead to damage in the electrical circuit or even a fire.

## Fuse allocation

GB

DJANGO ACTIVE		DJANGO LEGACY / SPORT	
F1 20A	+ after the ignition	F1 20A	+ after the ignition
-	-	F2 10A	Smart Key
F3 10A	Injection system	F3 10A	Injection system
F4 20A	ABS	F4 20A	ABS
F5 20A	General supply	-	-
F6 10A	Lighting	F6 15A	Lighting
F7 10A	OBD socket	F7 30A	General supply
F8 10A	Instrument panel	F8 10A	Instrument panel
F9 20A	Battery charge circuit	F9 30A	Battery charge circuit
F10 3A	USB socket	F10 3A	USB socket
F11 15A	General supply	F11 15A	General supply
F12 15A	Injection system	F12 15A	Injection system

## Adjusting the headlight beam

- The headlight beam is adjusted using a screw on the right side of the vehicle.



To avoid disturbing other road users, the headlights must be height-adjusted, depending on the vehicle load.



Peugeot Motocycles recommends



Quality management system certified ISO  
9001 by UTAC



**Peugeot Motocycles SA**  
**Rue du 17 Novembre**  
**F-25350 Mandeure**

Tél. +33(0)3 81 36 80 00

RCS Belfort B 875 550 667

[www.peugeot-motocycles.fr](http://www.peugeot-motocycles.fr)  
[www.peugeot-motocycles.com](http://www.peugeot-motocycles.com)



Dans un souci constant d'amélioration Peugeot Motocycles se réserve le droit de supprimer, modifier ou ajouter toutes références citées.  
DQ/APV du 02/2024 (photos non contractuelles).



# *Django*



**GUIDE D'UTILISATION EN LIGNE**

ONLINE USER'S GUIDE